26” HD Widescreen LCD TV/DVD Combo
TDX-02610B

Questions? Need some help?

This manual should help you understand your new product. If you have questions, call our toll-free number found on the insert with this icon:

Or visit www.polaroid.com.

©2007 by Polaroid All rights reserved.

“Polaroid” and “Polaroid and Pixel” are trademarks of Polaroid Corporation.
Changes are periodically made to this document. Changes, technical inaccuracies, and typographic errors will be corrected in subsequent editions.
For service, support and warranty information, visit www.polaroid.com.

This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly. To find out how to properly dispose of this product, please go to www.polaroid.com and click on “Company“ or call the customer service number for your country listed in the instruction manual.

DOLBY DIGITAL

Manufactured under license from Dolby Laboratories.
“Dolby” and the double-D symbol are trademarks of Dolby Laboratories.
Confidential unpublished works. © 1992 -1997 Dolby Laboratories, Inc. All rights reserved.

HDMI™

This TV incorporates High-Definition Multimedia Interface (HDMI™) technology.
HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Federal Communications Commission Statement

This equipment has been tested and found to comply with the limits of a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient/Relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit which is different from what the receiver is connected to.
4. Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user authority to operate the equipment.

Warnings and Precautions

To prevent any injuries, the following safety precautions should be observed in the installation, use, servicing and maintenance of this equipment.
Before operating this equipment, please read this manual completely, and keep it nearby for future reference.

WARNING	This symbol is intended to alert the user to avoid the risk of electric shock. This equipment must not be disassembled by anyone except qualified service personnel.
CAUTION	This symbol is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture.

- TO REDUCE THE RISK OF ELECTRIC SHOCK,
- DO NOT REMOVE COVER (OR BACK).
- NO USER-SERVICEABLE PARTS INSIDE.
- REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Important Safety Instructions

	This symbol indicates caution points.
	This symbol indicates actions that should not be done.
	This symbol indicates actions that must be performed.

- Do not place the equipment on any uneven or unstable carts, stands, tables, shelves etc. The equipment may fall, causing serious injury to children or adults and serious damage to the equipment itself.

- Use only a cart or stand recommended by the manufacturer. This equipment and recommended cart or stand should be handled with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart/stand to overturn.

- Do not disable the 3-wire grounding type plug. The grounding pin on the 3-prong plug is an important feature. Removing the grounding pin will increase the risk of damaging the equipment.
- If you can not fit the plug into the electrical outlet, contact an electrician to install a grounding outlet.
- Always operate this equipment from the type of power source indicated on the rear of the serial/model plate.
- Never overload wall outlets and extensions.

- Use and handle the power cord with care. Do not place any heavy objects on the AC power cord.
- Do not pull the AC power cord. Do not handle the AC power cord with a wet hand.
- Do not touch the power cord and antenna cable during lightning.
- Remove the plug from the wall outlet, if the equipment will not be used for a long period of time.
- Do not place, use or handle this equipment near water.
- Never expose the equipment to liquid, rain, or moisture.
  Seek for service if any of the above is spilled into the equipment.
- Do not expose the equipment to extreme temperature or to direct sunlight, as the equipment may heat up and suffer damage.
- Do not install the equipment near any heat sources such as radiators, heat registers, stoves, or any other apparatus that might produce heat.
- Do not attempt to service the equipment yourself.
- Opening and removing the covers may expose you to dangerous voltage or other hazards and may void your warranty. Refer service to qualified personnel.
- Do not place or drop any other objects on top.
- Do not insert anything into the ventilation holes of your equipment.
  Inserting any metal or flammable objects may result to fire or electric shock.
- Protect the power cord from being walked on or pinchrd particularly at plugs ,convenience receptacles, and the point where they exit from the apparatus.
- Do not place the equipment on uneven or unstable carts, stands, tables, shelves etc. The equipment may fall, causing serious injury to children or adults and serious damage to the equipment itself.
  Always place the equipment on the floor or on a surface that is sturdy, level, stable and strong enough to support the weight of the equipment.
- Do not block any ventilating openings. Leave an open space around the equipment.
  Never place the equipment :
  on a bed, sofa, rug, or any other similar surfaces; too close to drapes/curtains/walls, in a bookcase, built-in cabinet, or any other similar places that may cause poor ventilation.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- Always remove the power cord from the outlet before cleaning the equipment.
- Never use liquid or aerosol cleaners on the equipment.
  Clean only with a soft dry cloth.

- Only use attachments/accessories specified by the manufacturer.

Antenna Safety Instructions

If an outdoor antenna is connected, follow the precautions below:

- An outdoor antenna should not be located in any area where it could come in contact with overhead power lines, or any other electric light or power circuits.
- When installing an outdoor antenna system, extreme caution should be taken to prevent contact with power lines. Direct contact with power lines may be fatal and should be avoided at all costs.

Section 810 of National Electrical Code (NEC) provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

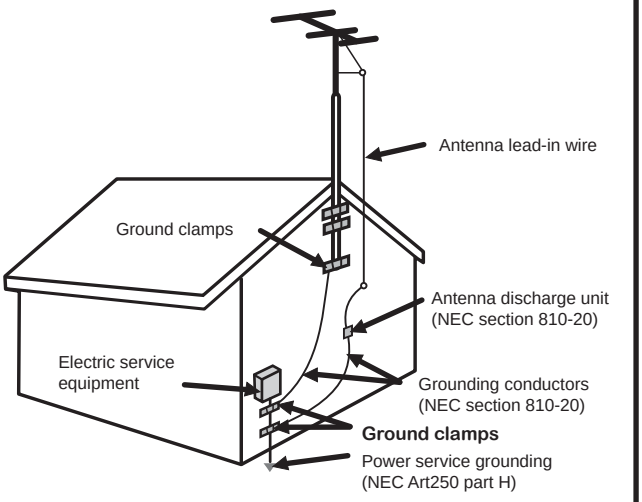

NEC : National Electrical code

EXAMPLE OF OUTDOOR ANTENNA GROUNDING

TABLE OF CONTENTS

ENGLISH

- **Federal Communications Commission Statement** 1
- **Warnings and Precautions**
  - Important Safety Instructions 2
  - Antenna Safety Instructions 4
- **Chapter 1 Introducing the LCD TV**
  - Key Features 6
  - Package Contents 7
  - Setting Your LCD TV 8
  - Your LCD TV 11
  - Your Remote Control 14
- **Chapter 2 Installing the LCD TV**
  - Connecting a TV Cable or an Antenna 18
  - Connecting a VCR 23
  - Connecting a Video Camera or Game Console 24
  - Connecting a DVD Player 26
  - Connecting a Digital TV Cable Box or Digital Satellite Receiver 27
  - Connecting an AV Equipment with HDMI Connector 28
  - Connecting an AV Equipment with DVI Connector 29
  - Connecting a PC 30
  - Connecting an Audio Receiver or a Dolby Digital 5.1 Sound System 31
- **Chapter 3 USING THE FEATURES**
  - Using The Built-in DVD 32
  - Using The USB Storage and SD Card Reader 34
  - Wide Screen Viewing 37
  - Using the Program Guide 38
  - Operating the Menu 39
  - Customizing the VIDEO Settings 41
  - Customizing the AUDIO Settings **43**
  - Customizing the TV Settings **45**
  - Customizing the SETUP Settings 47
  - Using the Program Block Settings 50
- **Specifications** 55
- **Programming your Remote Control** 56

Chapter 1
Introducing the LCD TV

Key Features

Various Audio/Video terminals for external equipment connection
- 2 sets of composite A/V input terminals
- 1 set of S-VIDEO terminals
- 2 sets of component Video input terminals
- 1 VGA/ Audio input terminals
- 2 HDMI/Audio input terminals
- 1 set of Audio(L/R) output terminals
- 1 Headphone terminal

Built-In Slot-type DVD Player
- Supports DVD/SVCD/VCD/CD compatibility.

Built-in SD Card Reader
- Allows access to digital content stored on a SD card.

Built-In USB Connector

The built-in TV tuner to receive HD ATSC
- This function allows the reception of HD broadcasting without the addition of a set top box.

High Definition Multimedia Interface (HDMI)
- High Definition Multimedia Interface (HDMI) is a small, user-friendly interconnect that can carry up to 5 Gbps of combined video and audio in a single cable. This system eliminates the cost, complexity and confusion of multiple cables used to connect current A/V systems.

HDTV Component Video Inputs
- Offers the best video quality for DVD (1080i, 720p) and digital set-top-box (1080i, 720p) connections.

3D Digital Noise Reduction
- This function can digitally reduce image noise to provide better picture quality.

Film-Mode Detection (3:2 Reverse Pull Down)
- This function can automatically detect content derived from film and adjust the interlacer's frame matching to provide a more natural-looking, clearer image of the moving picture.

Package Contents

Make sure all of the following contents are included.

☑ LCD TV

☑ Bottom Stand /
Screw Driver and Screws (4)

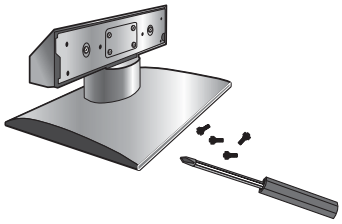

☑ Remote Control/
AAA Batteries x 2

☑ VIDEO Cable

☑ Component Cable



☑ Power Cord

☑ AUDIO Cable

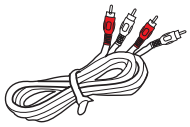

☑ Warranty Card

☑ User's Manual

☑ Quick Start Guide

☑ Stand Assembly Guide

These items are all you need to set up and operate the LCD TV in its basic configuration.

Make sure all of the above contents are included in the package. If you are missing any items, please contact the Polaroid customer service department.

Setting Up Your LCD TV

How to install the TV Stand

Read all instructions before continuing with the stand installation.

Attach the Stand the TV with the bottom foam packaging material still attached.

a. Lift foam packaging material from the top of the LCD out of the box.
b. Lift LCD out of the box, with the bottom foam packaging material still attached, and place onto a stable surface.

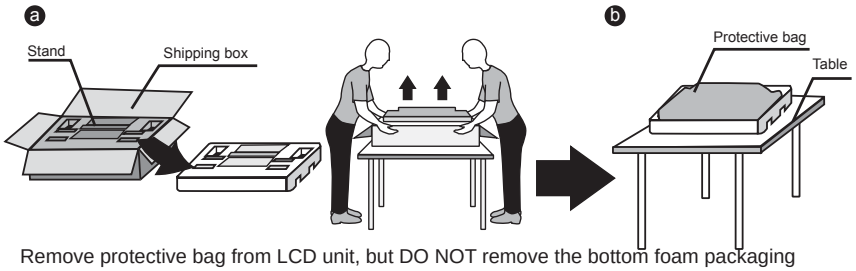

c. Remove protective bag from LCD unit, but DO NOT remove the bottom foam packaging material from the TV.
d. Locate the place on the back of the TV to attach the stand. Secure the stand to the LCD with all six screws.

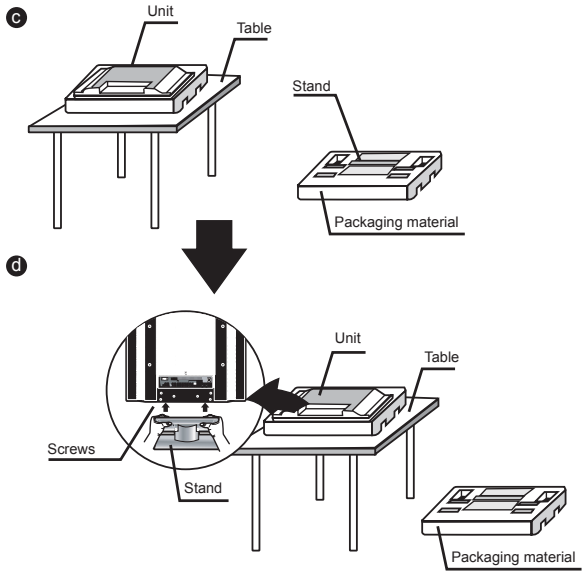

How to remove the TV Stand

If you prefer to mount your new Polaroid TV on a wall instead of attaching it to the stand, please reference the instructions included in the wall mounting kit (sold separately).

Verify your TV's model and be sure to use the wall mounting kit specified for your TV model only. Contact your technician for assistance when installing the wall mounting kit.

1. To prevent damaging the surface of the LCD TV, place the TV on a soft cloth.

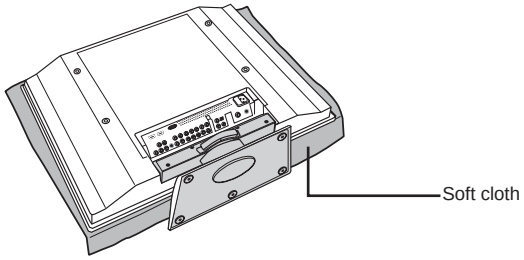

2. Remove the screws of the table stand and detach the table stand from the TV.

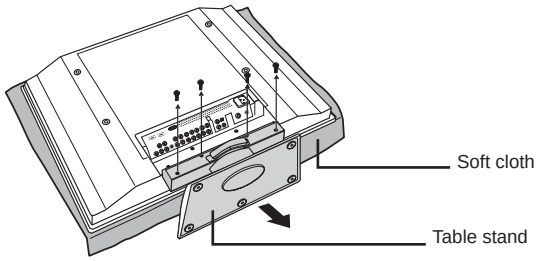

3. Align the holes on the wall mounting hook units with the corresponding holes on the rear of the TV and fasten four screws.

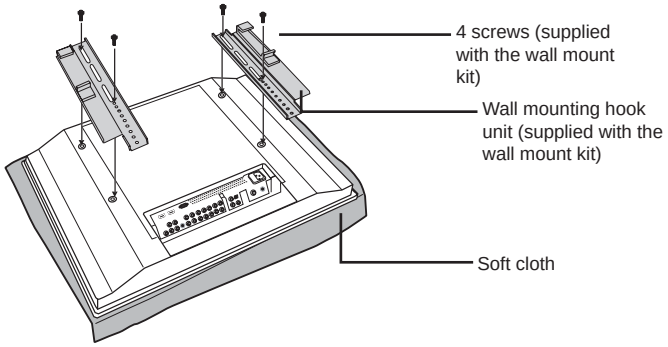

How to setup the TV

1. Use a supplied antenna cable to connect the VHF/UHF signal to the LCD TV's ANT. terminal (refer to page18-22).

2. Connect the AC power cord at the back of the TV and connect the power cord to wall outlet.

3. Insert the 2 batteries supplied in remote control.

Step1 Slide the back cover up to open the battery compartment of the remote control.

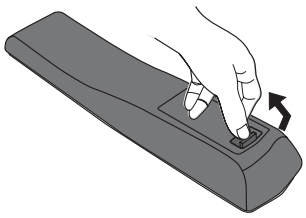

Step2 Insert two AAA size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment. Slide the cover back into place.

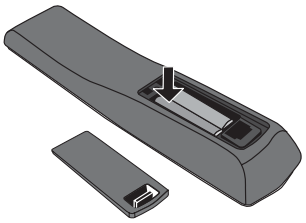

Do not use caustic cleaners (porcelain, stainless steel, toilet, or oven cleaner etc.) on the remote, as it may suffer damage.

4. Connect other an external AV device (refer to page23-31).

ENGLISH

Your LCD TV

Front/Right Side View and Controls



VOLUME+-
Adjusts the volume up and down. Selects the main-menu item and change values for items when in the OSD mode.

CHANNEL▲▼
Scans up and down through channels. Selects sub-menu item when in the OSD mode.

MENU
Press once to display the OSD (on screen display), press again to turn the OSD off.

INPUT
Chooses from different input signal sources.

⏻
Turns the LCD TV on and into standby mode.

Right Side View and Controls

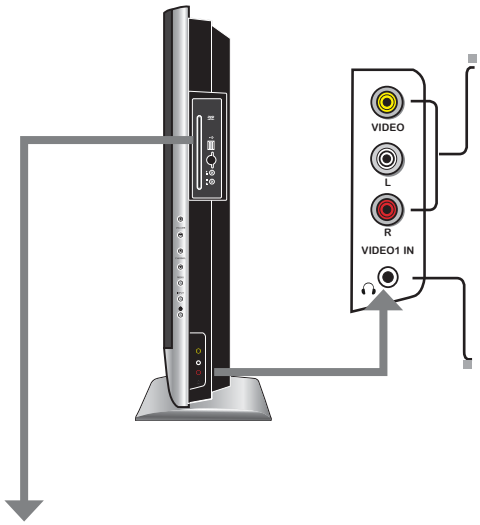

VIDEO1 IN
Connects to the composite Video and Audio output jacks on external video equipment.

HEADPHONE
Connects to the external headphone for private listening.

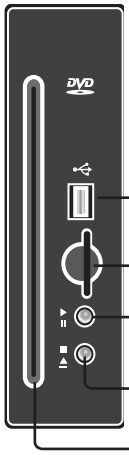

USB
Allows access to digital content stored on a USB storage : MP4/JPEG

BUILT-IN SD CARD READER
Allows access to digital content stored on a SD card : JPEG/MPEG1/MPEG2/MPEG4

► / II
PLAY/PAUSE

■ / ▲
STOP/EJECT

SLOT-TYPE DVD PLAYER
Any of the following disc types can be played on the DVD player: DVD/VCD/CD/CD-R/CD-RW/JPEG/KODAK PICTURE CD/WMA/DVD+R/RW/DVD-R/RW/MPEG-4
.

ENGLISH

Rear View and Jacks

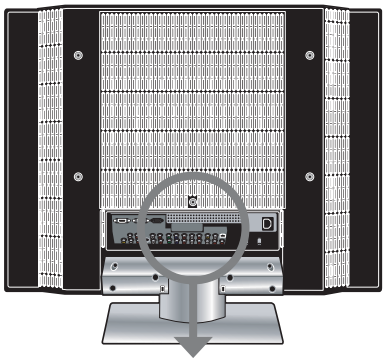

VIDEO2 IN
Connects to the composite VIDEO and AUDIO(L/R) output jacks on external video equipment.

HDMI1 IN/HDMI2 IN
Connects the all digital AV equipment with HDMI connector.HDMI supports enhanced, high-definition video and two-channel digital audio. The AUDIO(L/R) of HDMI IN is for DVI connection.

S-VIDEO IN
Connects to the S-VIDEO and AUDIO(L/R) output jacks on external video equipment.

VGA IN
Connects the PC, or other AV equipment with VGA and AUDIO(L/R) output jacks.

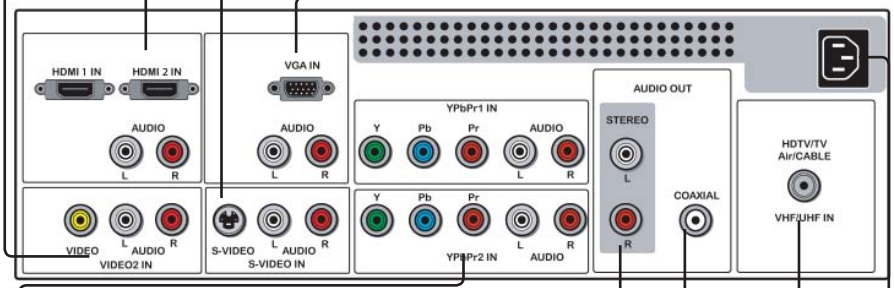

YPbPr1 IN/YPbPr2 IN
Connects to the DVD player, Digital Set-Top-Box, or other AV equipment with component(YPbPr) video and audio output jacks.

AUDIO OUT-STEREO
Connects to the AUDIO(L/R) input jacks on AV equipment.

AUDIO OUT-DIGITAL-OPTICAL/COAXIAL
Connects to the DIGITAL AUDIO jack on the digital/standard 5.1 audio system.

HDTV/TV AIR/CABLE
Connects RF input from VHF/UHF antenna or cable to receive high/standard definition television.

AC IN
Connects to the AC power cord.

Your Remote Control

This package includes a Polaroid remote that enables control of up to four devices.
To select a device, simply select one of the following device mode controls: TV, CBL/SAT, DVD/VCR, or AUDIO.

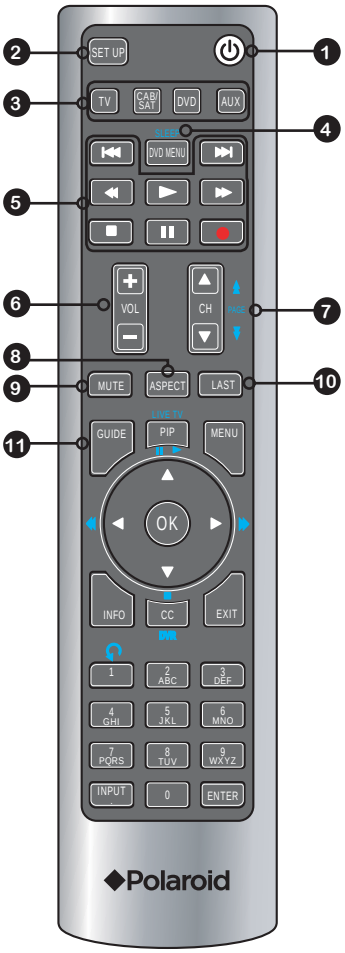

1	⏻	Turns the LCD TV on and off
2	**SET UP**	Remote control universal code setup. For more information on setting up your remote control, please see the "Programming Your Remote Control" section (refer to page 56)
3	**TV**	Controls the LCD TV/Built-in DVD/USB / SD card reader.
	CAB/SAT	Controls Cable Converter or Satellite Receiver
	DVD	Controls DVD player or Video player
	AUX	Controls Audio Amplifier
4	**SLEEP**	Cycles through the LCD TV sleep time: OFF/10/20/30/40/50/60/90/120 mins
5	● ⏸ ▶ ■ ⏮ ⏪ ⏩ ⏭	Other device function keys
6	**VOL+-**	Increases and decreases volume
7	**CH▲▼**	Change channel up and down
8	**ASPECT**	Cycles through Wide mode settings: NORMAL/FULL/WIDE/ZOOM
9	**MUTE**	Pressing once mutes audio. Pressing again restores audio
10	**LAST**	Returns to previously selected channel
11	**GUIDE**	In TV mode, pressing GUIDE displays the Program Guide on the screen

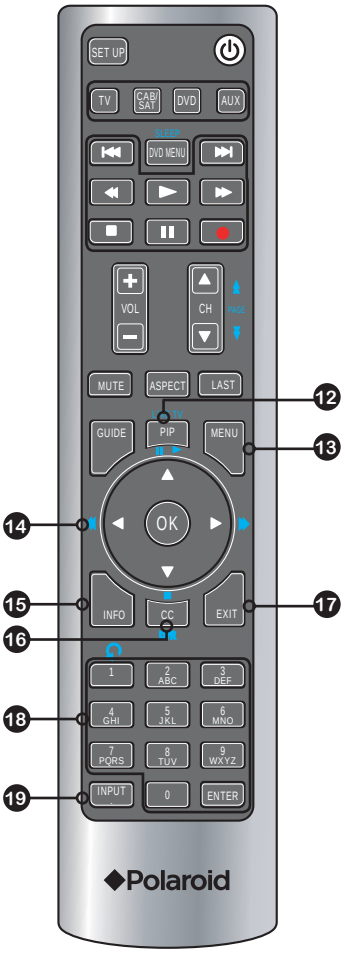

12	**PIP**	Other device function key
13	**MENU**	Displays the OSD menu on the screen.
14	**◄►▲▼,OK**	Cycles through OSD options and selects individual menu items. OK confirms option settings
	OK	In TV mode, pressing OK to display a channel list
15	**INFO**	Displays information on the LCD TV screen such as input source, channel, program title.
16	**CC**	Cycles through the Closed Caption: ▪ Analog Closed Caption:OFF/CC1/ CC2/CC3/CC4/Text1/Text2/Text3/ Test4 ▪ Digital Closed Caption: Allow to set the digital closed caption
17	**EXIT**	Exits the OSD menu
18	**0-9/ENTER**	Pressing a number selects a channel. Following selection, pressing ENTER activates the channel, or channel activates automatically in 3 seconds
19	**INPUT**	Pressing **INPUT** to display a source list, use ▲▼ to select the video equipment connected to the video inputs of your LCD TV:

Input Source
TV(CABLE/AIR)
VIDEO1 (SIDE)
VIDEO2 (REAR)
VIDEO3 (S-VIDEO)
VIDEO4 (YPbPr1)
VIDEO5 (YPbPr2)
DVD
USB
CARD READER
VIDEO6 (HDMI1)
VIDEO7 (HDMI2)
COMPUTER(VGA)

▪ In TV mode, use with 0-9 and ENTER buttons to select a digital channels.

Effective range:
The remote can control the LCD TV from up to 5m away, if pointed directly at the receiver.

Controlling The Built-in DVD

Press the TV button once to activate the built-in DVD control keys, the following functions are preset to operate the built-in DVD:

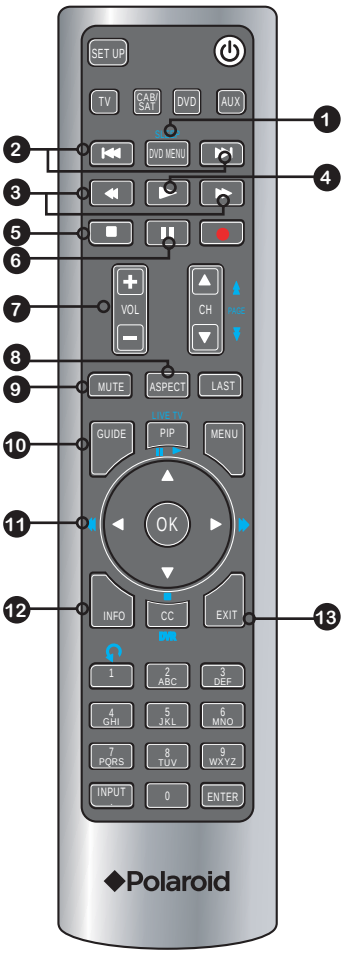

1	**DVD MENU**	Press to display the menu of a DVD disc.
2	⏮ ⏭	While playing, press to jump to the previous/next chapter or track.
3	⏪ ⏩	Pressing this button during playback advances/reviews playback; speed increases with each pressing: 2x/4x/8x/16x/32x
4	▶	Normal playback.
5	■	While playing, press this button to stop playing.
6	⏸	While playing, press this button once to pause playing, press once again to resume playing.
7	**VOL+-**	Increases and decreases volume.
8	**ASPECT**	Cycles through Wide mode settings: NORMAL/FULL/WIDE/ZOOM
9	**MUTE**	Pressing once mutes audio. Pressing again restores audio.
10	**GUIDE**	Displays the Built-in DVD Setup Menu on the screen.
11	**◄►▲▼,OK**	Cycles through Built-in DVD OSD options and selects individual menu items. **OK** confirms option settings
12	**INFO**	Displays current information on screen during playback.
13	**EXIT**	Press this button to eject the disc.

ENGLISH

Controlling The USB Storage and SD Card Reader

Press the TV button once to activate the built-in USB and SD Card Reader control keys, the following functions are preset to operate the USB Storage and SD Card: For more information on setting up your USB storagnd adn card reader, please see the “Using the USB Storage and SD Card Reader” section.

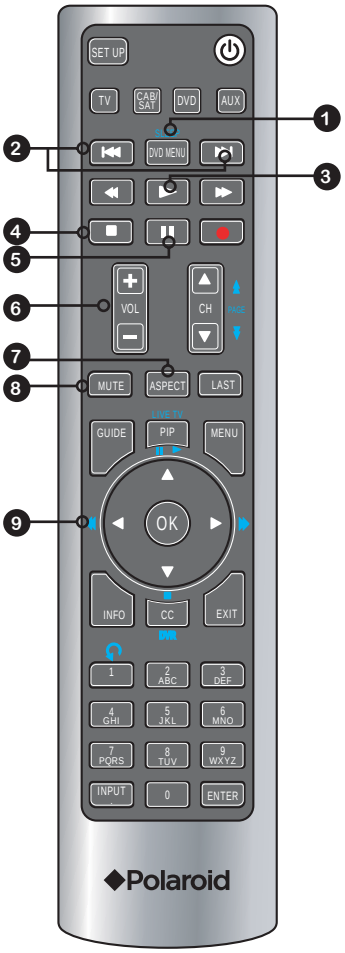

1	**DVD MENU**	Press to display FILE MENU.
2	⏮ ⏭	Press to go to the next or previous image.
3	▶	Normal playback.
4	■	Press to display the thumbnail album.
5	⏸	While Slide show, press this button once to pause playing, press once again to resume playing.
6	**VOL+-**	Increases and decreases volume.
7	**ASPECT**	Cycles through Wide mode settings: NORMAL/FULL/WIDE/ZOOM
8	**MUTE**	Pressing once mutes audio. Pressing again restores audio.
9	◄►▲▼,**OK**	In FILE MENU and thumbnail album, Press to move the highlight bar to a file, then press **OK** to confirm the selected file.
	►▼	While image displaying, press to rotate an image 90 degrees in a clockwise or counterclockwise.

Chapter 2
Installing the LCD TV

Refer to the owner's manual of any external equipment to be connected.
When connecting any external equipment, do not connect any AC power cords to wall outlets until all other connections are completed.

Connecting a TV Cable or an Antenna

Antenna Connection

The antenna requirements for good color TV reception are more important than those for a black & white TV reception. For this reason, a good quality outdoor antenna is strongly recommended.
The following is a brief explanation of the type of connection that is provided with the various antenna systems.

- **A 75-ohm system is generally a round cable (not included) with F-type connector that can easily be attached to a terminal without tools.**



- **A 300-ohm system is a flat twin-lead cable (not included) that can be attached to a 75-ohm terminal through a 300-75-ohm adapter (not included).**



Use one of the following two diagrams when connecting an outdoor antenna.
A: Shows how to use a VHF/UHF combination outdoor antenna.
B: Shows how to use a separate VHF and/or UHF outdoor antenna.

A. Combination VHF/UHF antenna

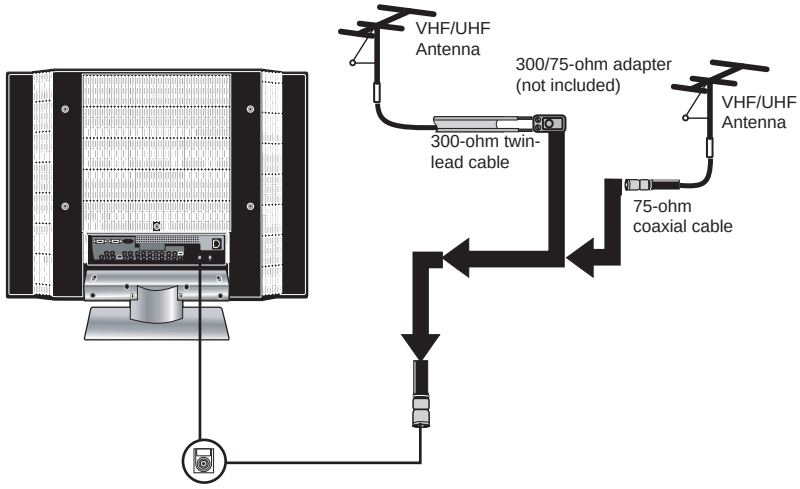

B. Separate VHF and/or UHF antennas

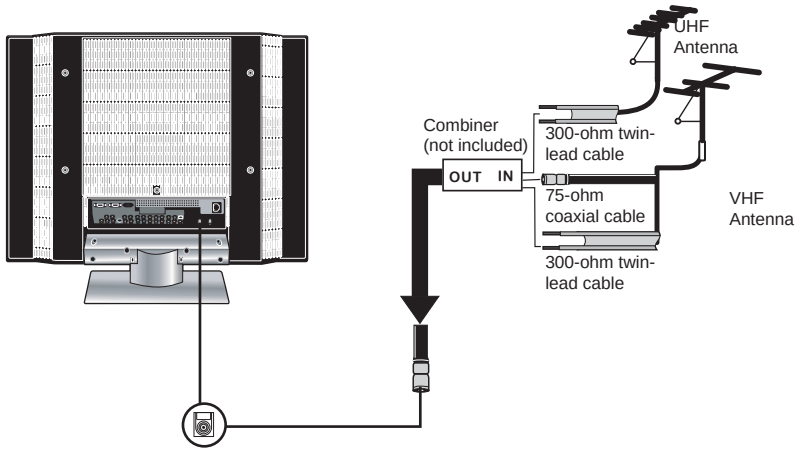

Cable TV (CATV) Connection

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the National Electrical Code (NEC) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building accurately, or as close to the point of cable entry as possible. Use of this TV for other than private viewing of programs broadcasted on UHF, VHF or transmitted by cable companies for the use of the general public may require authorization from the broadcast/cable company, and/or program owner.

- **A 75-ohm coaxial cable connector is built into the set for easy hookup. When connecting the 75-ohm coaxial cable to the set, connect the 75-ohm cable into the ANT. terminal.**
- **Some cable TV companies offer premium pay channels. Since the signals of these premium pay channels are scrambled, a cable TV converter/descrambler is generally provided to the subscriber by the cable TV company.**

This converter/descrambler is necessary for normal viewing of scrambled channels.
(Set your TV to channel 3 or 4, typically one of these channels is used. If this is unknown, consult your cable TV company.)
For more specific instructions on installing cable TV, consult your cable TV company.
One possible method of connecting the converter/descrambler provided by your cable TV company is shown in the diagram below.

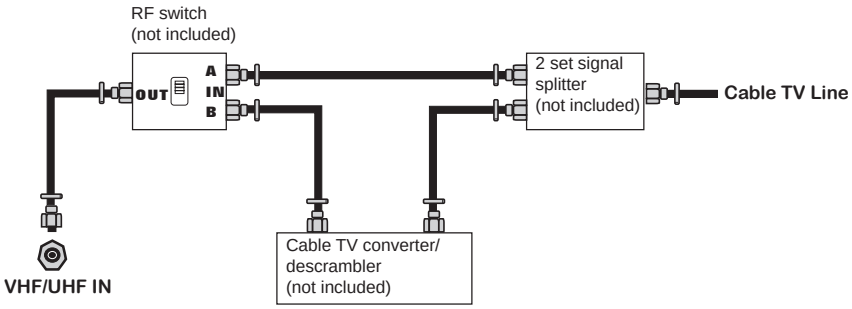

- **The RF switch (not included) is required to provide two inputs (A and B). Setting the RF switch to position A allows viewing of all unscrambled channels by using the TV channel keys.**
- **Setting the RF switch to position B allows viewing of all scrambled channels via the converter/descrambler by using the converter channel keys.**

❶ Use a supplied antenna cable to connect the TV signal to the LCD TV's TV CABLE terminal.

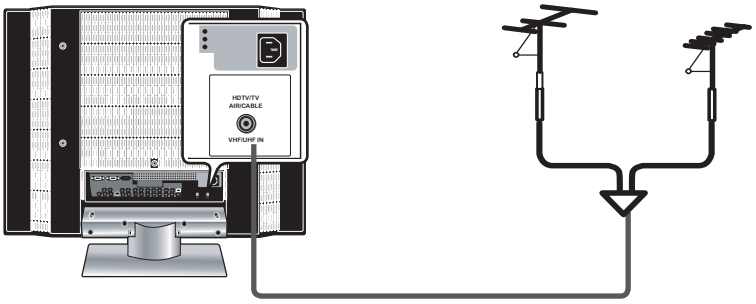

❷ Connect the AC power cord at the back of the TV and connect the power cord to wall outlet.

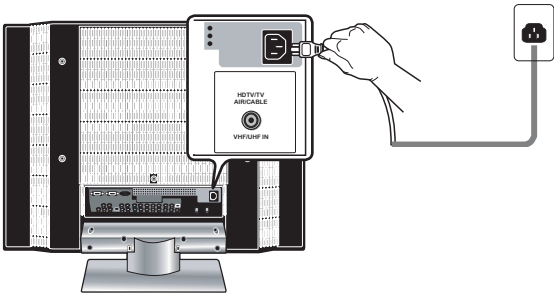

This TV is equipped with a safety fuse. In the event of an electrical storm or power outage the safety fuse is designed to protect your TV. If your TV has no power, check the fuse by prying the cover off, following the illustration below.
If the fuse is blown, visit your local hardware store and ask for a 4A 250V - 5x20mm Time Lag Fuse (Slow Blow) to replace the fuse.

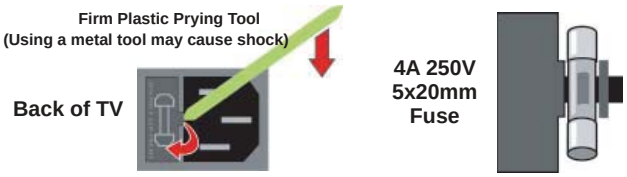

BE SURE TO UNPLUG AC POWER CORD BEFORE REMOVING THE FUSE.

❸ Press the ⏻ button on the remote to turn on the LCD TV.

Always disconnect the LCD TV from the main voltage when the LCD TV will not be used for a long period of time. The POWER button on the front panel is only used for switching the LCD TV into standby, it does not disconnect the device from the main voltage. To completely disconnect the main voltage, please remove the power plug from the socket.

4 Press the **INPUT** button on the remote to display the Input List. Use the ▲▼ buttons to select **TV** and press the **OK** button.

5 Press the **MENU** button on the remote control to display the Main menu, and use the ◄► buttons to select the **TV**.

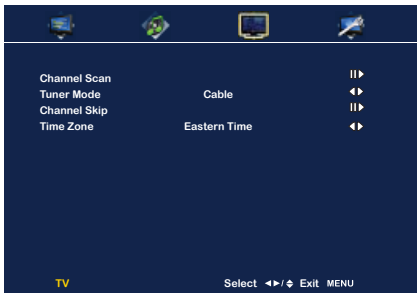

6 Press the ▼ button to select **Channel Scan**, and press the **OK** button.
The **Channel Scan** automatically creates a list of receivable channels. Press the **MENU** button at any time to interrupt the memorization process.(the list cannot be created if interrupted)

The Channel Scanning will create a list of receivable channels for the current input (antenna or cable). You will be required to run Channel Scanning for each RF input to create a list of available channels from both inputs.

7 Press the **OK** button to display the received channel list, then press ▲▼ to select a channel. Or, use the ▪ (**INPUT** button) with **0-9** buttons to select digital channel(for example 9.1)

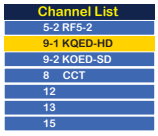

The digital main channel might include many subchannels (for example 9-1, 9-2..) that are showing program at the same time.

Connecting a VCR

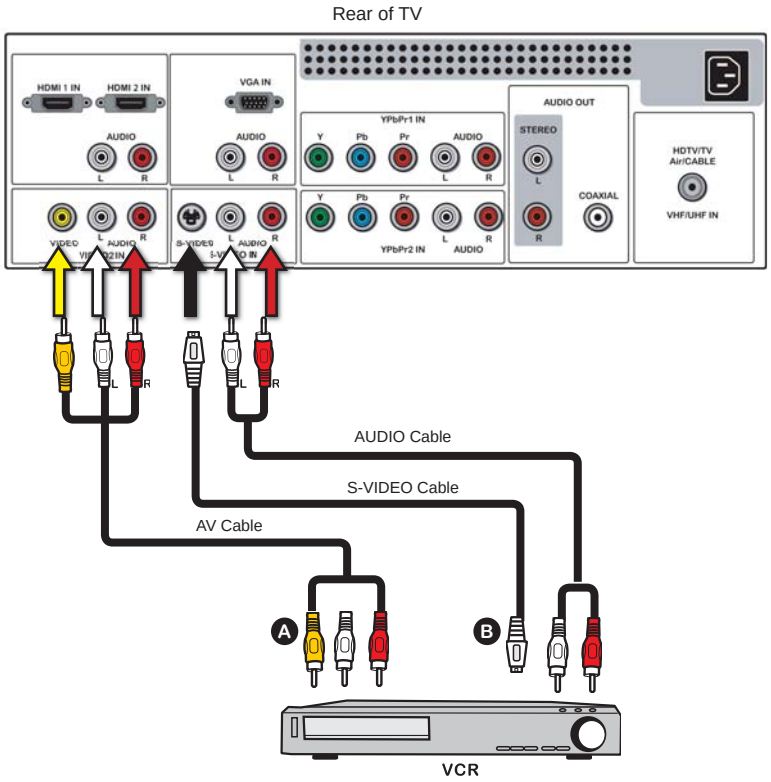

1. **METHOD A:**

   Use a composite cable to connect the VCR's composite video/audio jacks to the LCD TV's VIDEO2 IN jacks.

   METHOD B:
   Use an audio cable to connect the VCR's audio output jacks to the LCD TV's audio inputs. Use a S-Video cable to connect the VCR's s-video output jack to the LCD TV's S-VIDEO IN input jack.

2. Connect all AC power sources, before turning on the power switch of the LCD TV or other connected equipment.

3. Press the ⏻ button on the remote to turn on the LCD TV.

4. To watch a videotape, press the **INPUT** button on the remote to select **VIDEO2**(METHOD A), or **VIDEO3** (METHOD B).

Connecting a Video Camera or Game console

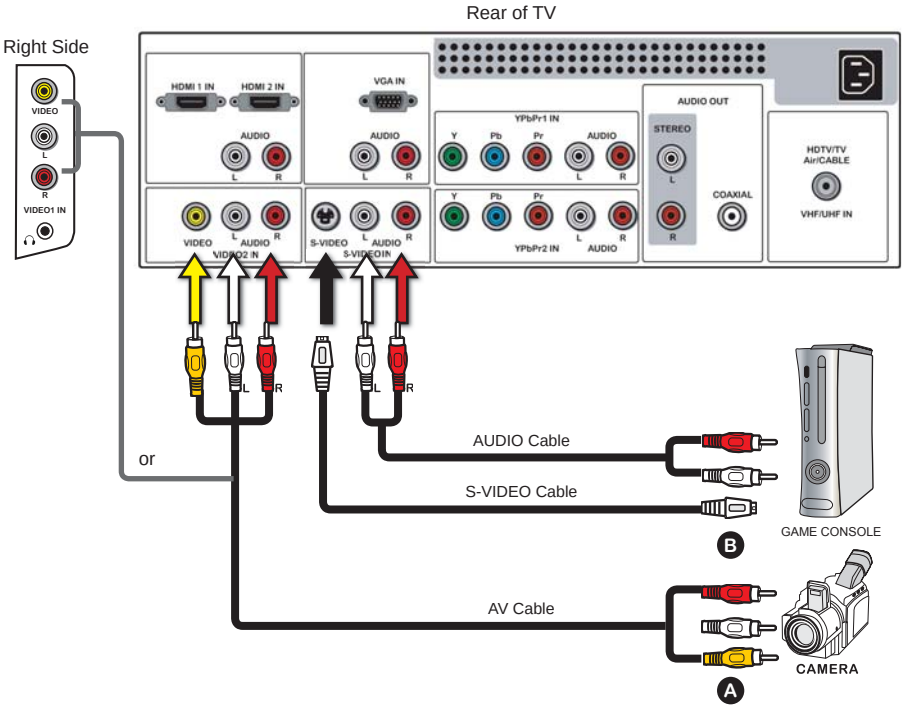

1. **METHOD A:**

   Use a composite cable to connect the video camera's or game console's composite video/audio jacks to the LCD TV's VIDEO2 IN jacks or VIDEO1 IN jacks.

   METHOD B:
   Use an audio cable to connect the video camera's or game console's audio output jacks to the LCD TV's audio inputs. Use an S-Video cable to connect the video camera's or game console's s-video output jack to the LCD TV's S-VIDEO IN input jack.

2. Connect all AC power sources, before turning on the power switch of the LCD TV or other connected equipment.

3. Press the ⏻ button on the remote to turn on the LCD TV.

4. To watch a video vis camera or game console, press the **INPUT** button on the remote to select **VIDEO2/VIDEO1**(METHOD A), or **VIDEO3** (METHOD B).

Not all cameras have the ability to connect to a TV. Please check your video camera user guide for compatibility.

Connecting a DVD Player

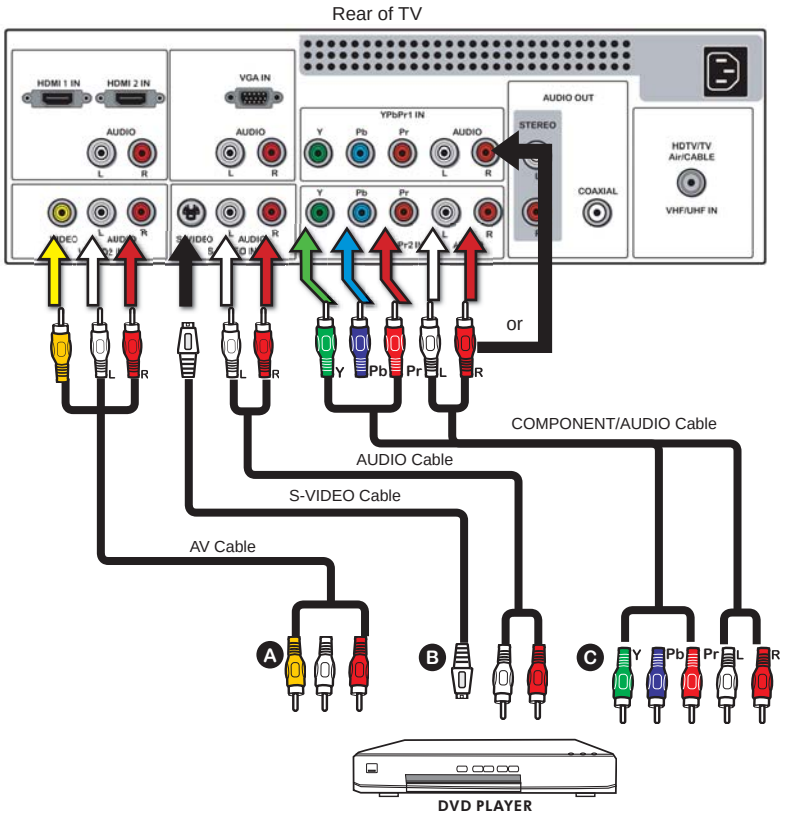

❶

METHOD A:
Use a composite cable to connect the DVD player's composite video/audio jacks to the LCD TV's VIDEO2 IN jacks.

METHOD B:

Use an audio cable to connect the DVD player's audio output jacks to the LCD TV's audio inputs. Use an S-Video cable to connect the DVD player's s-video output jack to the LCD TV's S-VIDEO IN input jack.

METHOD C:
Use a component cable to connect the DVD player's component output jacks to the LCD TV's YPbPr1 IN or YPbPr2 IN input jacks.
Use an audio cable to connect the DVD player's component audio jacks to the LCD TV's audio input jacks.

The component video jacks on your DVD player are sometimes labeled YPbPr, or YCbCr. For an explanation of component video, see your DVD player's user guide.

2. Connect all AC power sources, before turning on the power switch of the LCD TV or other connected equipment.

3. Press the ⏻ button on the remote to turn on the LCD TV.

4. To watch a DVD, press the **INPUT** button on the remote to select **VIDEO2**(METHOD A), or **VIDEO3** (METHOD B), or **VIDEO4/VIDEO5** (METHOD C).

For best picture quality, if your equipment has component video output, use a component cable instead of a composite video or S-video cable.

ENGLISH

Connecting a Digital TV Cable Box or Digital Satellite Receiver

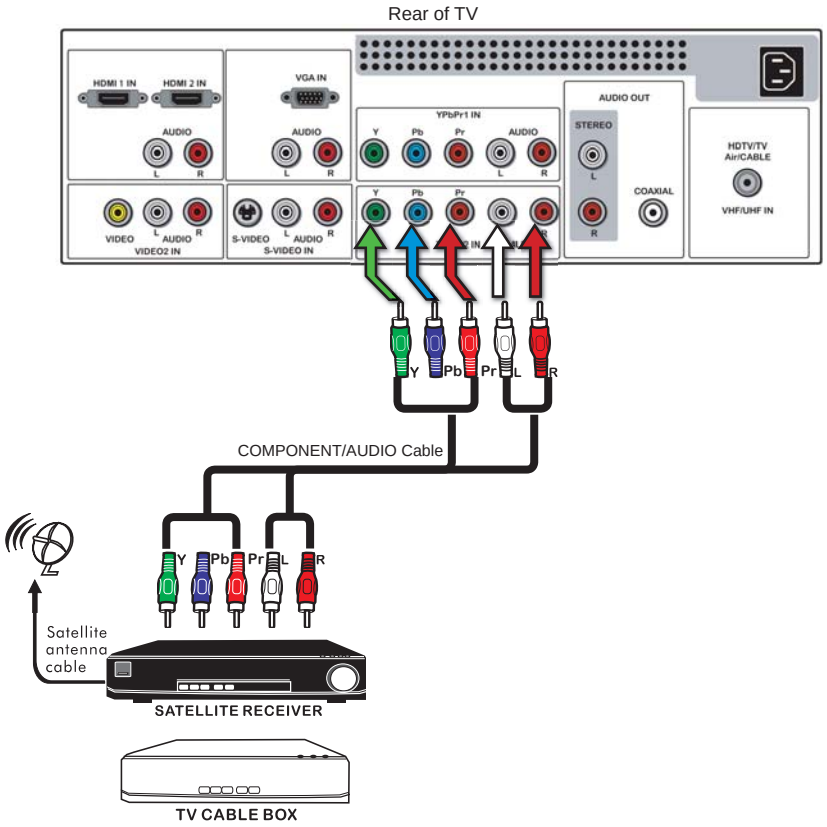

1. Use a component cable to connect the satellite receiver's/TV Cable Box's component (YPbPr1) output jacks to the LCD TV's component input jacks.
   Use an audio cable to connect the satellite receiver's/TV Cable Box's component audio jacks to the LCD TV's audio input jacks.

2. Connect all AC power sources, before turning on the power switch of the LCD TV or other connected equipment.

3. Press the ⏻ button on the remote to turn on the LCD TV.

4. To watch programs via satellite receiver or TV Cable Box, press the **INPUT** button on the remote to select **VIDEO4/VIDEO5**.

Connecting an AV Equipment with HDMI Connector

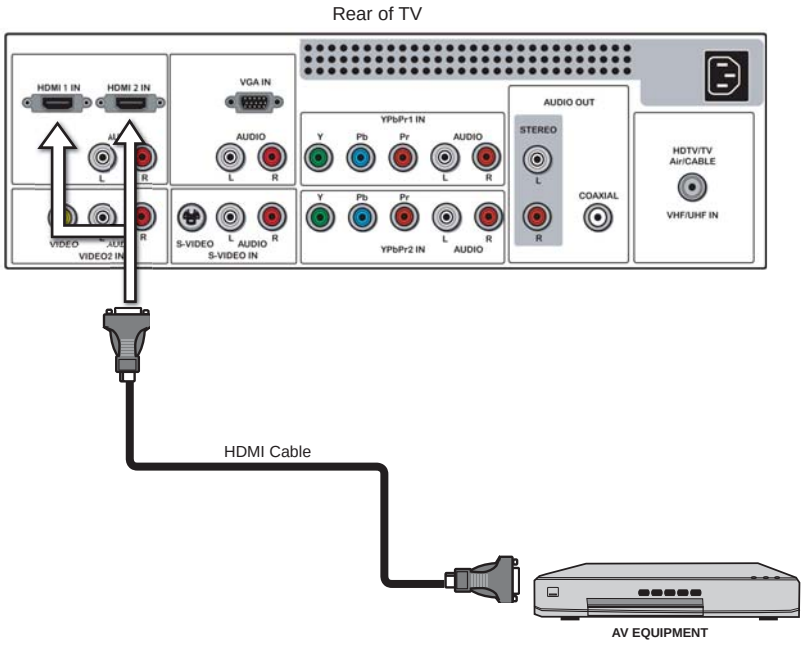

1. Use a HDMI cable to connect the AV equipment's HDMI output jack to the LCD TV's HDMI IN jacks.
2. Connect all AC power sources, before turning on the power switch of the LCD TV or other connected equipment.
3. Press the ⏻ button on the remote to turn on the LCD TV.
4. Press the **INPUT** button on the remote to select **VIDEO6** or **VIDEO7**.

The HDMI connector provides both video and audio signals, it's not necessary to connect the audio cable.

Connecting an AV Equipment with DVI Connector

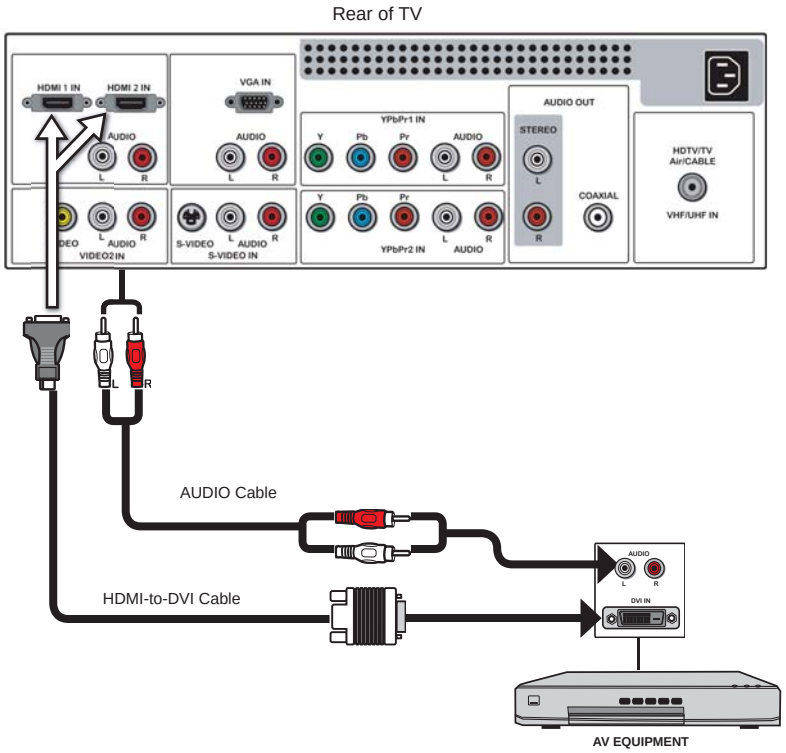

1. Use a HDMI-to-DVI cable to connect the AV equipment's DVI output jack to the LCD TV's HDMI IN jacks.
   Use an audio cable to connect the AV equipment's audio output jacks to LCD TV's HDMI AUDIO jacks.
2. Connect all AC power sources, before turning on the power switch of the LCD TV or other connected equipment.
3. Press the ⏻ button on the remote to turn on the LCD TV.
4. Press the **INPUT** button on the remote to select **VIDEO6** or **VIDEO7**.

If the LCD TV is connected to AV equipment's DVI connector, you will need an HDMI-to-DVI cable or an HDMI adapter(not suplied) and an audio cable.

Connecting a PC

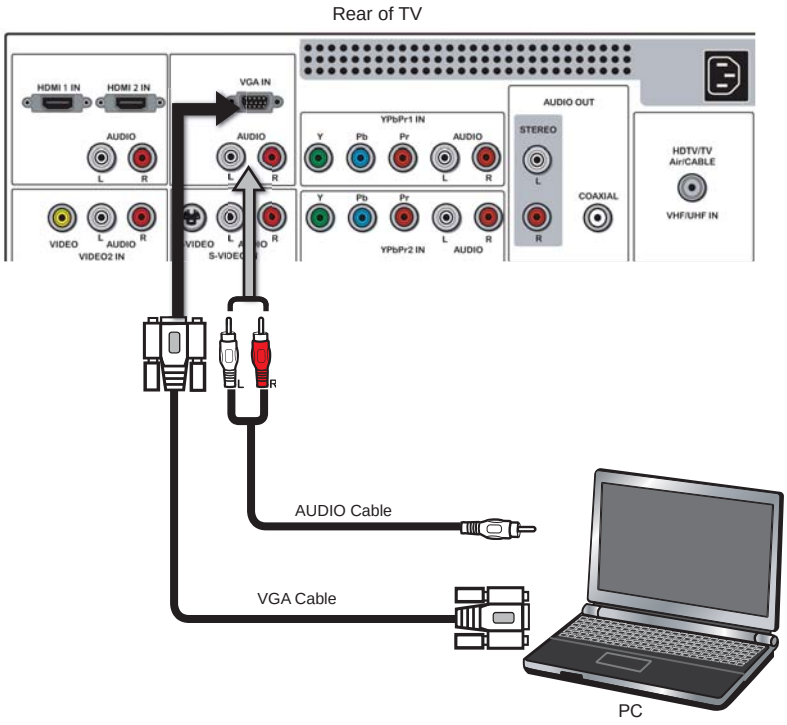

1. Use a D-SUB cable to connect the PC's D-SUB output jack to the LCD TV's VGA input jack. Use an audio cable to connect the PC's audio output jacks to LCD TV's.
2. Connect all AC power sources, before turning on the power switch of the LCD TV or other connected equipment.
3. Press the ⏻ button on the remote to turn on the LCD TV.
4. Press the **Input** button on the remote to select **COMPUTER**.

ENGLISH

Connecting an Audio Receiver or a Dolby Digital 5.1 Sound System

For better sound quality, you may want to use a Home Theater/Stereo System.

NOTE: If you have a Home Theater/Stereo System that you would like to use with your new TV, we recommend that you do NOT use your TV's audio output for this connection. For the best sound quality, our product testing has shown that you should connect your Home Theater/Stereo System directly to your A/V device. I.E. You should connect your Home Theater/Stereo System to your DVD player, Cable/Satellite box or other AV equipment. Although not recommended, if you prefer to use the TV audio output to make this connection to your Home Stereo System, please follow the instructions below.

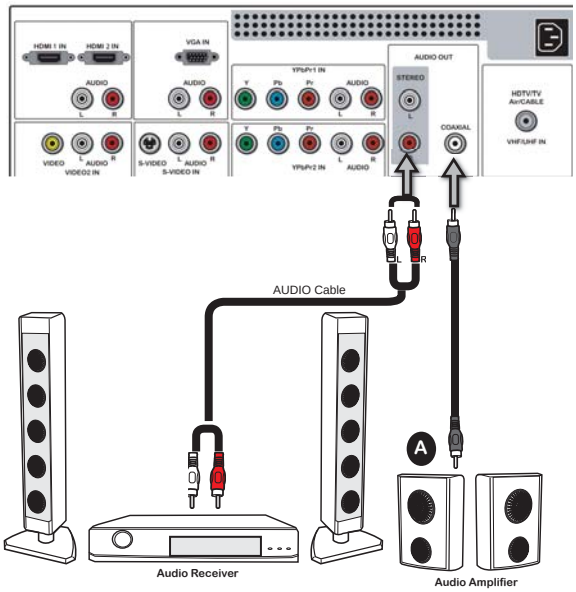

1. **Connecting to Audio Receiver:**
   Use an audio cable to connect the audio receiver's audio LINE IN jacks to LCD TV's AUDIO OUT jacks.

2. **Connecting to Digital 5.1 Sound System:**
   METHOD A:
   Use a coaxial cable to connect the audio amplifier's COAXIAL IN jacks to LCD TV's COAXIAL OUT jacks.

3. Connect all AC power sources, before turning on the power switch of the LCD TV or other connected equipment.

4. Press the ⏻ button on the remote to turn on the LCD TV.

Chapter 3
USING THE FEATURES

Using The Built-in DVD

1. Turn your LCD TV on.

2. Insert a disc (DVD, VCD, SVCD, or audio CD).
NOTE: The printed side of the disk should face the front of the TV.

- **TO INSERT A DISC**
  Any of the following disc types can be played on the DVD player: DVD-Video/DVD R/RW/SVCD/VCD/CD/CD-R/CD-RW.

- **TO REMOVE A DISC**
  When removing the disc, do not attempt to pull it from its slot. Please push the **EJECT** button as illustrated below.

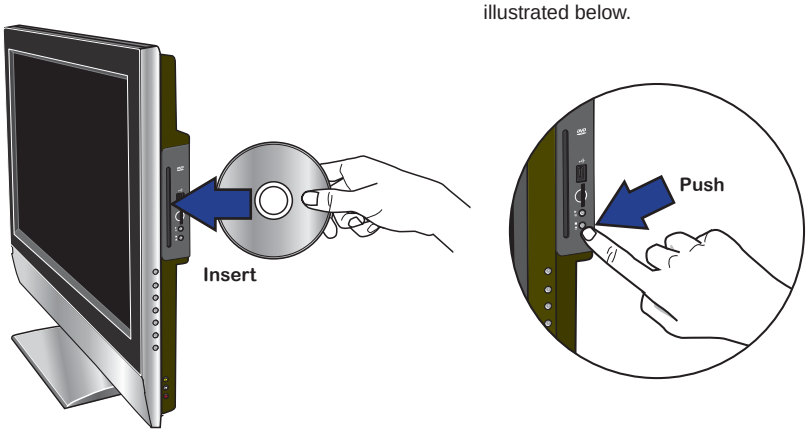

3. Press the **Input** button on the remote, use ▲▼ to select **DVD** and press the **OK** button.

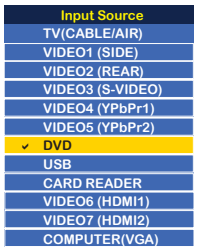

4 Press **GUIDE** button on the remote control to display the Built-in DVD Setup Menu:

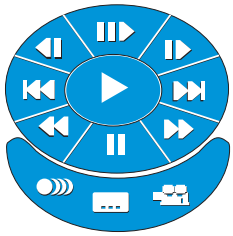

- **USING THE BUILT-IN DVD SETUP MENU**

1. Use the ▲▼◄► on the remote control to to move the light bar to the option you want, press the **OK** button.

2. During playback, the following operations are available:
   - **EJECT** Stops playback.
   - **PLAY** Starts playback.
   - Get slow motion effect during playback
   - **F.FWD/NEXT** Jumps to the previous/next chapter or track.
   - **REW./PREV** Gets different playback forward/backward speeds.
   - **PAUSE** While playing, pause playback temporarily
   - **AUDIO** Press to select the Audio effect and Language.
   - **SUBTITL** Changes DVD subtitle language. When this icon is highlighted you must press the OK button to change the language selections.
   - **CAMERA ANG** Press to select the desired camera angle disc.

5 The Built-in DVD player can playback JPEG format pictures and audio files on a personally recorded CD-R/RW disc. After loading all files, the **File Menu** will show the contents of the disc:

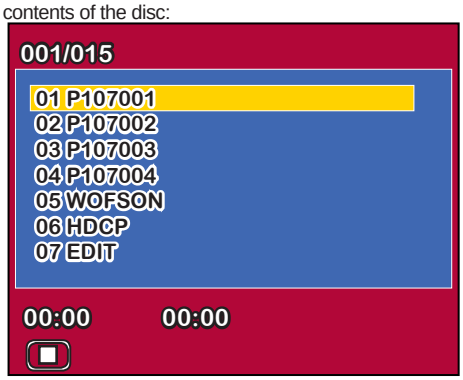

- Press ▲▼ to select an image and press the button to play the file.
- Press ▲▼ to select the folder and then press ► to enter the folder. Press the **ENTER** button to active and press ▲▼ to select a file. Press ◄ to back the File Menu.
- While an image is displayed, press the **DVD MENU** button to display the File Menu.

Using The USB Storage and SD Card Reader

1. Turn your LCD TV on.

2. Insert a USB device/SD card that contains JPG/JPEG/MPG/WMA/DAT files.

   - **TO INSERT A USB STORAGE**
     Allows the insertion of a USB storage. You can view digital images or music in a USB storage on your TV.

   - **TO INSERT A SD CARD Reader**
     Allows the insertion of a SD card. You can view digital images or music.

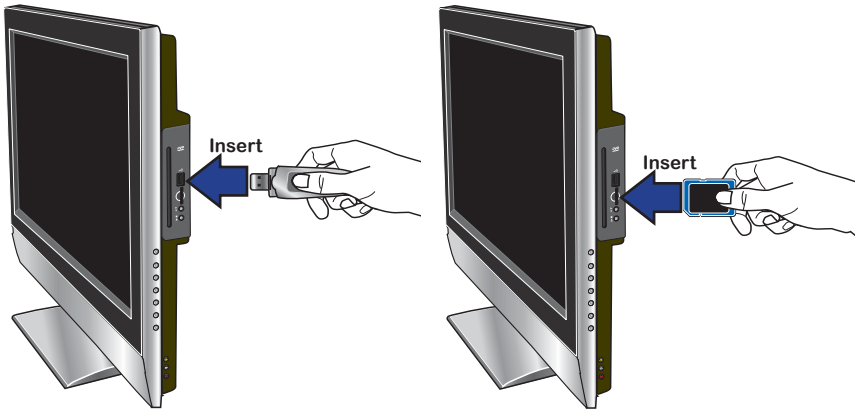

Besuretoinserttheor SD card is forced in the wrong way, it may cause damage.

3. Press the **Input** button on the remote, use ▲▼ to select a input source and press the **OK** button.

   - **TO INSERT A USB STORAGE**

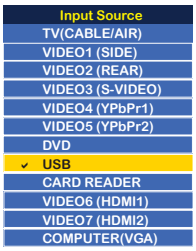

   - **TO INSERT A SD CARD Reader**

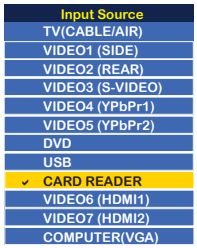

4

After loading all files, the **File Menu** will show the contents of the USB device:

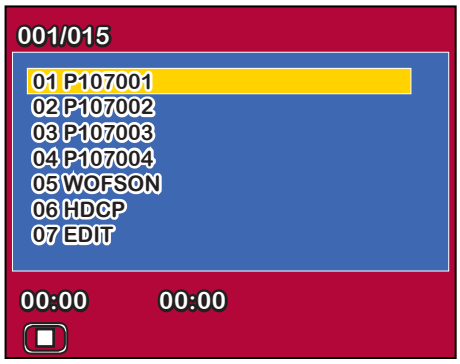

DonotswitchtheInputSourcebetweenUSBandCARDREADERwhilethedataisbeing read. It may cause data loading failure.

- Press ▲▼ to select an image and press the ▶ button to play the file.
- Press ▲▼ to select the folder and then press ► to enter the folder. Press the **ENTER** button to active and press ▲▼ to select a file. Press ◄ to back the File Menu.
- While an image is displayed, press the **DVD MENU** button to display the File Menu.

5

- **RUNNGING A SLIDE SHOW**

1. Press ▲▼ on the remote control to move the light bar to the file you want to play, and press the **OK** button to play the file.
2. While an image is displayed full size, you can pause the slide show by pressing ⏸ .
3. Press ⏮ ⏭ on the remote control to go to the next or previous image.

- **USING THE THUMBNAIL ALBUM**

1. Press ■ button on the remote control to display the thumbnail album.

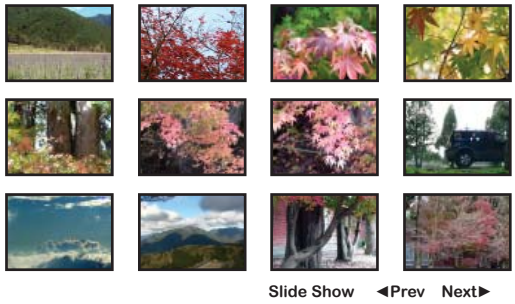

2. Press ▲▼◄ on the remote control to move the light bar to the image you want to play, and press the **OK** button to play the file.

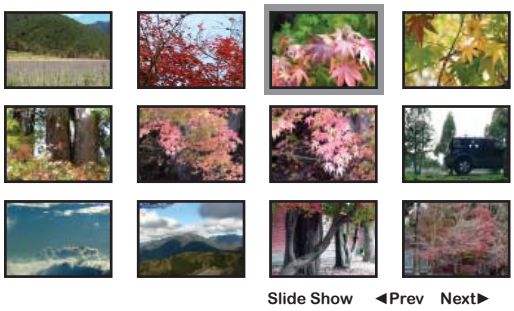

3. ▪ Slide Show: Press ▲▼◄ to highlisht **Slide Show** and press the **OK** button, to display all the images recorded on the SD card/USB storage.

   ▪ Prev/Next: Press ▲▼◄ to highlisht **Prev/Next** and press the **OK** button, to go to the previous or next page of the thumbnail album.

▪ **ROTATING PICTURES**

1. Press ◄► on the remote control to to rotate the picture clockwise or counterclockwise in 90-degree increments.

2. Press ⏮ ⏭ on the remote control to go to the next or previous image.

.

Wide Screen Viewing

Wide Screen function allows viewing of 4:3/16:9 images in wide screen mode, cycling through the following wide screen settings. Press the **ASPECT** button repeatedly to select the screen format you want.

1. **NORMAL**

   Displays at 4:3 aspect ratio

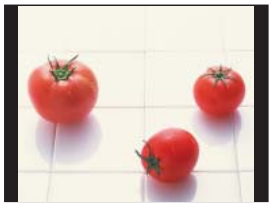

   NORMAL is not available when you are watching 720p or 1080i source.

2. **FULL**

   Stretches the image vertically and horizontally to keeps the image size consistent in the center of the screen and stretches the sides

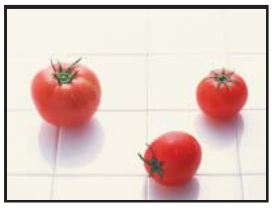

3. **WIDE**

   Stretches the image vertically and horizontally to fill the screen at 1:1.85 aspect ratio

4. **ZOOM**

   Stretches the image vertically and horizontally to fill the screen at 1:2.35 aspect ratio

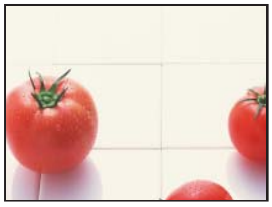

Using the Program Guide

The Program Guide feature brings all sorts of information to your screen, such as program title, program duration, time remaining, rating information, closed caption, availability, etc.

1. With the LCD TV connected to a television programming source, press the **INPUT** button on the remote control and use the ▲▼ buttons to select **TV** and press the **OK** button.

2. Press the **GUIDE** button on the remote control, the Program Guide will appear on the screen:

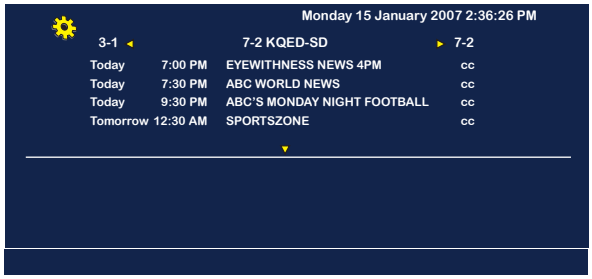
Monday 15 January 2007 2:36:26 PM
3-1
7-2 KQED-SD
7-2
Today 7:00 PM EYEWITHNESS NEWS 4PM cc
Today 7:30 PM ABC WORLD NEWS cc
Today 9:30 PM ABC'S MONDAY NIGHT FOOTBALL cc
Tomorrow 12:30 AM SPORTSZONE cc

3. Press the ◄► button to select the channel.

4. Press the ▲▼ button to select the program from a list, the Program Guide provides introduction about the current program being shown on each channel.
The Program information in the guide is provided by the broadcasters. It may sometimes include only the channel number, without a program title or description.

Monday 15 January 2007 2:36:26 PM
3-1
7-2 KQED-SD
7-2
Today 7:00 PM EYEWITHNESS NEWS 4PM cc
Today 7:30 PM ABC WORLD NEWS cc
Today 9:30 PM ABC'S MONDAY NIGHT FOOTBALL cc
Tomorrow 12:30 AM SPORTSZONE cc
5:00 PM - 5:30 PM Mon, 20 Jan.
TV-PG
EYEWITHNESS NEWS

5. Press the **GUIDE** button again on the remote control to exit the Program Guide

Operating the Menu

1. Press the ⏻ button to turn the LCD TV on.

2. Press the **MENU** button on the remote control, the on-screen menu will appear on the screen. Use the ◄► buttons to select your main menu option.

VIDEO MENU:

Allows you to make adjustments to your picture settings.

- If the signal source is TV, the VIDEO MENU appears as:

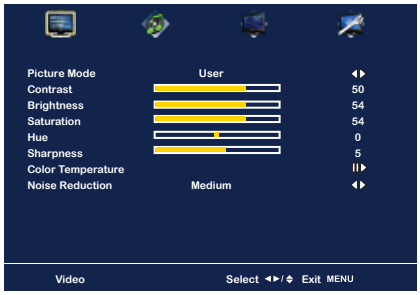

- If the signal source is Video/S-Video/YPbPr/VGA/HDMI, the VIDEO MENU appears as:

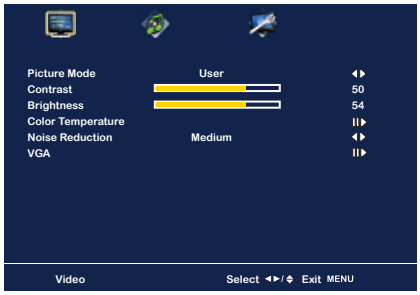

AUDIO MENU:

Allows you to customize the audio options and effects.

- If the signal source is VIDEO/S-VIDEO/YPbPr/HDMI/VGA, the AUDIO MENU appears as:

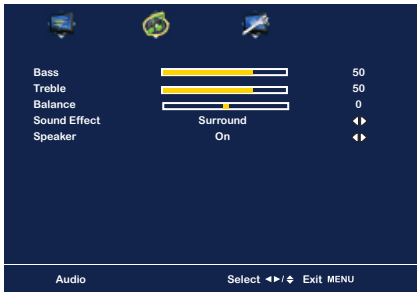

- If the signal source is TV, the AUDIO MENU appears as:

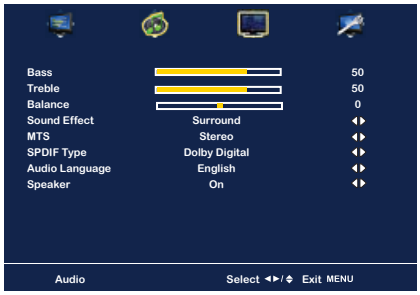

TV MENU:

Allows you to edit and label channels.

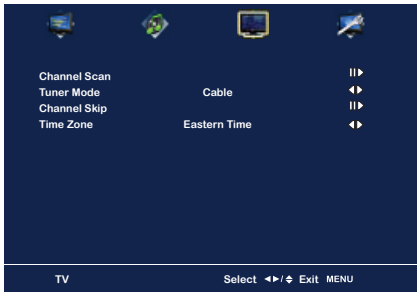

SETUP MENU:

Allows you to set up a variety of features: Language, Closed Caption, factory reset, Parental Control, sleep timer.

- If the signal source is TV, the SETUP MENU appears as:

- If the signal source is HDMI/VGA/Video/S-Video/ YPbPr, the SETUP MENU appears as:

3. Use the ▲▼ buttons to highlight the option of the sub-menu, and press the **OK** button. While in adjustment mode, and use the ◄► buttons to change the value of the item.

4. Press the **EXIT** button to exit the menu.

Customizing the VIDEO Settings

1. Press the ⏻ button to turn the LCD TV on.

2. Press the **MENU** button on the remote control to display the Main menu, and use the ◄► buttons to select the **VIDEO**.

3. Use the ▲▼buttons to highlight an individual VIDEO option, use the ◄► buttons to change the setting, and press the **MENU** to exit the menu

   - If the signal source is TV, the VIDEO MENU appears as:

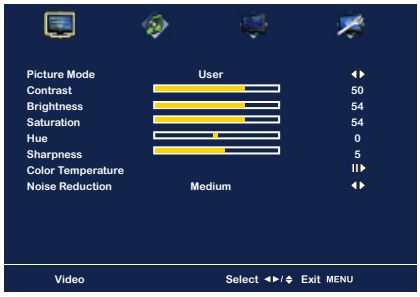

   - If the signal source is VGA/Video/S-Video/YPbPr/HDMI, the VIDEO MENU appears as:

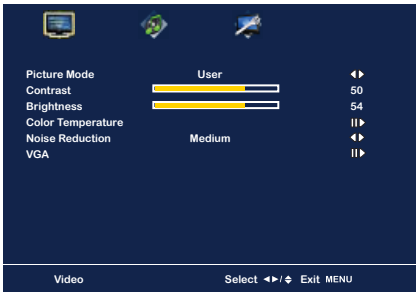

4. The **VIDEO** menu includes the following options:

Picture Mode	Cycles among display types: Vivid/Hi-Bright/Cinema/Sport/User
Contrast	Controls the difference between the brightest and darkest regions of the picture
Brightness	Controls the overall brightness of the picture
Saturation	Controls the color intensity
Hue	Controls the difference between the green and red regions of the picture
Sharpness	Increase this setting to see crisp edges in the picture; decrease it for soft edges

Color temperature

Adjusts color components independently to achieve a warm or cool effect: Cool/Middle/Warm/User

- **Warm:** Increases red tint
- **Nature :** Increases natural tint
- **Cool :** Increases blue tint
- **User :** Allows the user to adjust red, green and blue color component levels independently.

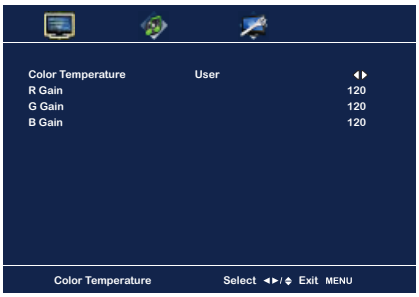

Noise Reduction

Select to reduce the noise level of connected equipment: Off/Low/ Medium/Strong.

VGA

Press the **OK** button to enter the VGA Setting:

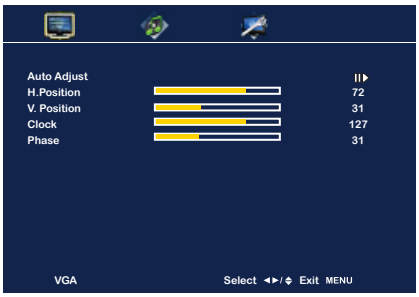

- **Auto Adjust** Press the **OK** button to automatically adjust the display settings to optimize performance based on the VGA mode
- **H. Position** Adjusts the position of the picture left and right in the window
- **V. Position** Adjusts the position of the picture up and down in the window
- **Clock** Controls the width of the picture based on the VGA mode
- **Phase** Controls the signal phase, which can improve focus clarity and image stability based on the VGA mode

ENGLISH

Customizing the AUDIO Settings

1. Press the ⏻ button to turn the LCD TV on.

2. Press the **MENU** button on the remote control to display the Main menu, and use the ◄► buttons to select the **AUDIO**.

3. Use the ▲▼buttons to highlight an individual AUDIO option, use the ◄► buttons to change the setting, and press the **MENU to** exit the menu

- If the signal source is VIDEO/S-VIDEO/YPbPr/ HDMI/VGA, the AUDIO MENU appears as:

- If the signal source is TV, the AUDIO MENU appears as:

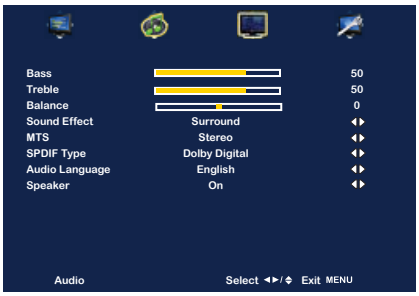

4. The **AUDIO** menu includes the following options:

Bass	Controls the relative intensity of lower-pitched sounds
Treble	Controls the relative intensity of higher pitched sounds
Balance	Adjusts the relative volume of the speakers in a multiple speaker system
Sound Effect	Allows selection of an audio-enhancement technique from among the following options: Surround/Live/Dance/Techno/Classic/Soft/Rock/ POP/Off
MTS	Allows you to listen to high-fidelity stereo sound while watching TV ▪ **Stereo**: Use separate audio tracks for left and right speakers, if available ▪ **SAP:** You can enjoy a second audio program from the speakers while watching a scene in the original program ▪ **Mono:** Allows mono output (useful when stereo is noisy or inconsistent)

SPDIF Type	Allows to selection of the digital sound format: PCM/OFF/Dolby Digital ▪ **PCM**: The external audio system is connected to the AUDIO OUT (L/R) of the LCD TV ▪ **Dolby Digital**: The external audio system is connected to the AUDIO OUT DIGITAL (OPTICAL or COAXIAL) ot the LCD TV ▪ **OFF**: Select OFF to turn off the external audio system
Audio Language	Allows to select the audio language:English/Spanish/French.
Speaker	Allows to select to turn on or off the TV speakers.

Customizing the TV Settings

ENGLISH

❶ Press the ⏻ button to turn the LCD TV on.

❷ Press the **MENU** button on the remote control to display the Main menu, and use the ◄► buttons to select the **TV**.

❸ Use the ▲▼buttons to highlight an individual TV option, use the ◄► buttons changes the setting, and press the **MENU** exits the menu.

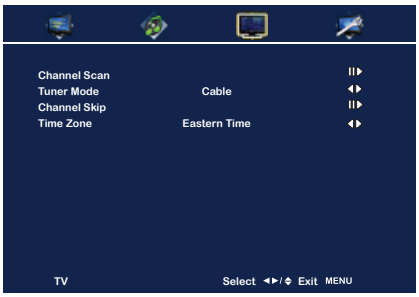

❹ The **TV** menu includes the following options:

Channel Scan	Press the **OK** button, the **Channel Scanning** automatically creates a list of receivable channels.
Tuner Mode	Allows selection between CATV cable and antenna signal sources: ▪ **AIR** Choose this setting if you are receiving TV channels with an antenna (over the air) ▪ **Cable** Choose this setting if you are receiving TV channels with a CATV (cable TV)
Channel Skip	Allows addition/removal of channels on the channel list. ❶ Press the **OK** button to display the Channel Skip menu:

	❷ Press the ▼ button to select the desired channel, andpress the **OK** button repeatedly to select **show (☑)** or **hide(□)**
Time Zone	Allows selection of regional TV systems of USA: Eastern Time/ Indiana/Central time/Mountain Time/Arizona/Pacific Time/Alaska/ Hawaii

Customizing the SETUP Settings

❶ Press the ⏻ button to turn the LCD TV on.

❷ Press the **MENU** button on the remote control to display the Main menu, and use the ◄► buttons to select the **SETUP**.

❸ Use the ▲▼buttons to highlight an individual SETUP option, use the ◄► buttons to change the setting, and press the **MENU to** exit the menu.

- If the signal source is TV, the SETUP MENU appears as:

- If the signal source is HDMI/VGA/Video/S-Video/ YPbPr, the SETUP MENU appears as:

❹ The **SETUP** menu includes the following options:

OSD Language	Selects to display all on-screen menus in your language of choice: English/French/Spanish
Closed Caption	Allows to select from analog or digital closed caption modes and press the **OK** button. The Closed Captain list appears:

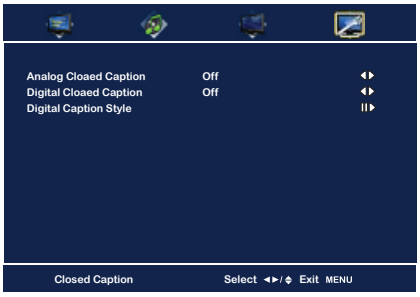

❶ **Analog Closed Caption**:
Press the ◄► buttons to select the basic analog closed caption options: OFF/CC1/CC2/CC3/CC4

- **CC1 /CC2 /CC3 /CC4:**
  Display a printed version of the dialog and sound effects of the program being viewed

- **T1/T2:**
  Display station information presented using either half or the whole screen
- **T3/T4:**
  Extended Data Services. For example: Network name, program name, program length, etc.

❷ **Digital Closed Caption**:
Press the ◄► buttons to select the digital closed caption option.

Note: The setting here will be applied to each DTV channel

❸ **Caption Style:**
Press **OK** button to customize the settings for digital closed caption option:

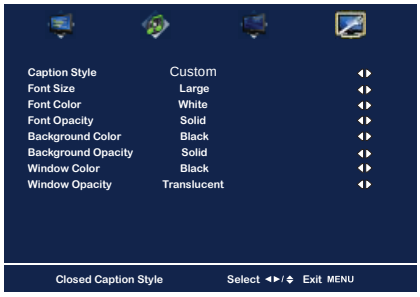

Parental

The Parental Control can be set up to the TV to block Channel, Video Source and to change password.

❶ Use the ▼ button to select the **Parental**, and press the **OK** to display the Parental menu

❷ Use the **Program Block** function, must enter a four-digit password. The factory password is 0000

❸ The Parental list appears:

- **Program Block** Allows to setup the TV and MPAA Rating Lock options (refer to “Using the Program Block Setting”).

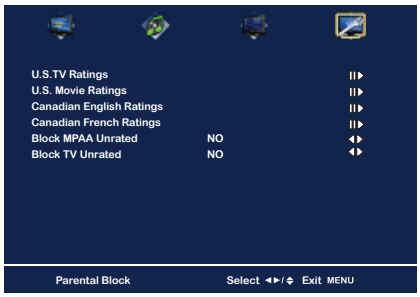

- **Channel Block** Allows to block digital channels.

- **Input Block** Selects to block a Input source signal

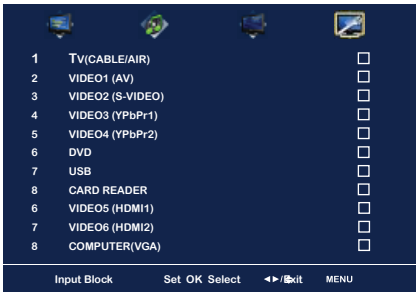

- **Change Password** Selects to change your password

Gamma	Allows adjustment of the display's gamma correction, which finetunes both brightness and red/green/blue ratios: On/Off/Middle/ Bright/Dark
Reset Default	Press the **OK** button to restore factory settings

Using the Program Block Settings

1. Press the **MENU** button on the remote control to display the Main menu, and use the ◄► buttons to select the **SETUP**.

2. Use the ▼ buttons to highlight **Parental**, and press the **OK** button.

3. Use the **Parental** function, must enter a four-digit password. The factory password is 0000.

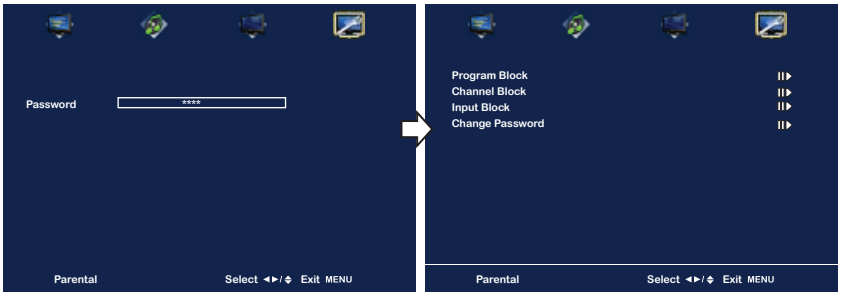

4. Use the ▼ button to select the **Program Block**, and press the **OK** to display the Program Block menu.

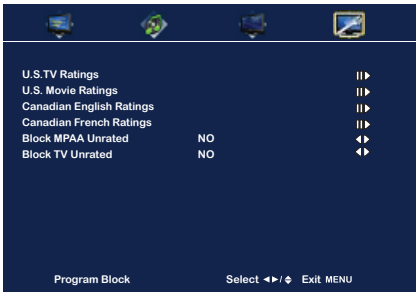

5 The **Parental block** menu includes the following options:

U.S. TV Ratings	Selects to activate the TV Rating programs.
U.S. Movie Ratings	Selects to activate the MPAA Rating programs
Canadian English Ratings	Selects to activate the English Rating programs of Canada.
Canadian French Ratings	Selects to activate the French Rating programs of Canada
Block MPAA Unrated	▪ YES: Block all movies that are broadcast without a MPAA rating. ▪ NO: Allows all movies that are broadcast without a MPAA rating
Block TV None Rating	▪ YES: Block all movies that are broadcast without a TV rating. ▪ NO: Allows all movies that are broadcast without a TV rating.

U.S. TV Ratings

The U.S.TV Rating has 2 rating methods: Content-Based Rating and Age-Based Rating. The U.S.TV Rating includes the following options:

Note:
When a channel is blocked the user can unblock the channel by entering the password. Press the OK button and enter the password to watch that channel. Once the channel is changed and you return to it, they must re-enter the password.

AGE-BASED

RATING	DESCRIPTION
TV-Y	All children
TV-Y7	Directed to children age 7 and older
TV-G	General Audience
TV-PG	Parental Guidance suggested
TV-14	Parents strongly cautioned
TV-MA	Mature Audience only

CONTENT-BASED

RATING	DESCRIPTION
FV	Fantasy violence
D	Suggestive dialogue
L	Strong language
S	Sexual situations
V	Violence
ALL	All contents are blocked

		CONTENT-BASED				
		FV	D	L	S	V
AGE-BASED	TV-Y					
	TV-Y7	✔				
	TV-G					
	TV-PG		✔	✔	✔	✔
	TV-14		✔	✔	✔	✔
	TV-MA			✔	✔	✔

✔ : To block programs by both content and age.

Use the ◄►▲▼ buttons to select the rating you want and press the **OK** button repeatedly to select **BLOCK** 🔒 or **UNBLOCK** ☐ .

Canadian English Ratings

The Canadian Englsh Ratings includes the following options:

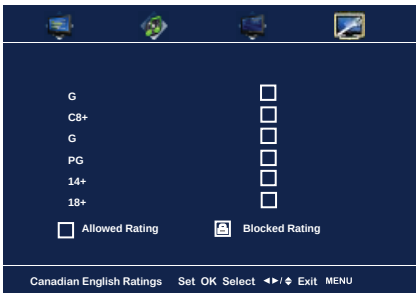

RATING	DESCRIPTION
G	All children
C8+	Children 8 years and older
G	General programming
PG	Parental guidance
14+	Viewers 14 and older
18+	Adult programming

Use the ◄►▲▼ buttons to select the rating you want and press the **OK** button repeatedly to select **BLOCK** or **UNBLOCK**.

Canadian French Ratings

The Canadian French Ratings includes the following options:

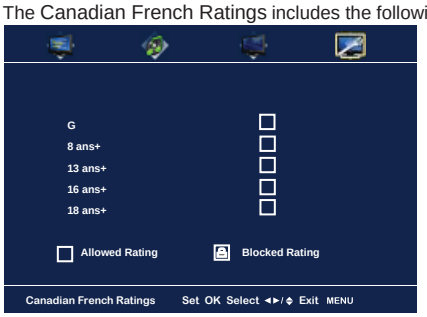

RATING	DESCRIPTION
G	General programming
8 ans+	Not recommended for ages under 8
13 ans+	Not recommended for ages under 13
16 ans+	Not recommended for ages under 16
18 ans+	Programming restricted to adults.

Use the ◄►▲▼ buttons to select the rating you want and press the **OK** button repeatedly to select **BLOCK** or **UNBLOCK**.

U.S. Movie Ratings

The U.S. Movie Ratings is used for original movies rated by the Motion Picture Association of America(MPAA) as broadcasted on cable TV and not edited for television.
The U.S. Movie Ratings includes the following options:

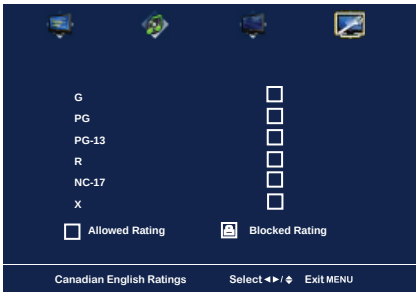

RATING	DESCRIPTION
G	General Audiences. Movie is appropriate for all ages
PG	Parental Guidance Suggested. May contain material not suited for younger viewers
PG-13	Contains content that may not be appropriate for viewers under the age of 13
R	Restricted. Contains adult content, no one under 17 admitted without parent
NC-17	No one 17 and under admitted
X	No one 17 and under admitted

Use the ◄►▲▼ buttons to select the rating you want and press the **OK** button repeatedly to select **BLOCK** 🔒 or **UNBLOCK** ☐.

SPECIFICATIONS

MODEL		TDX-02610B
LCD Panel	Panel Size	26” TFT LCD
	Brightness	500 cm2
	Contrast Ratio	800:1
Max. Resolution		1366x768
Input Connector	VIDEO/AUDIO(L/R)	2
	S-VIDEO/AUDIO(L/R)	1
	YPbPr/AUDIO(L/R)	2
	VGA/AUDIO(L/R)	1
	HDMI/AUDIO(L/R)	2
	AUDIO OUT(L/R)	1
	COAXIAL	1
	HEADPHONE	1
Built-in DVD		1
USB Connector		1
SD Card Reader		1
Power Source		AC110~220V, 50/60HZ, 2.2A
Power Consumption		180 W, standby < 1 W
Dimension		27.30 w x 21.78 h x 3.86 d inches
WEIGHT		34.94 LB

PROGRAMMING YOUR REMOTE CONTROL

Your remote lets you control four devices with one easy-to-use, compact unit. After installing batteries, you can program the remote to control your Universal TV, VCR or DVD, Cable or Satellite Receivers, Amplifier or Tuner, and Auxiliary devices. To do so, follow the instructions in "Programming a Device". For best results, please read and follow all the remaining instructions. Keep this guide for future reference.

A Quick Look at Programming a Device

To control VCR or DVD, Cable or Satellite Receivers, Amplifier or Tuner, and Auxiliary devices, follow these steps. Before proceeding, find the codes for the devices you want to program in "Manufacturer's Codes" on the right side of this page and write them down or highlight them.

To program a DVD Player, TV/DVD Combo, TV/VCR/DVD Combo, portable DVD player, or mobile DVD player, use the DVD key.

1. Turn on the device (for example, DVD player) and, if needed, load media (for example, a DVD).
2. Press a device key (VCR/DVD, CBL/ SAT, or AUX).
3. Press and hold **SET UP** until the red LED blinks twice; then release.
4. Enter the first 4-digit code for your device. The LED blinks once as each digit is entered. If the code is correct, the LED blinks twice.

   If the LED does not blink twice, repeat steps 2 to 4 and try entering the code again.

5. Aim the remote at the device and press ⏻. The device should turn off. If it does not, repeat steps 3–5, trying each code for your brand until you find one that works. If you cannot find a code that works, see "Searching for Your Code".
6. Repeat steps 1–5 for the other devices you want to control. For future reference, write down each working device code below:
   AUX Code:
   CBL Code:
   CD Code:
   DVD Code:
   SAT Code:
   TNR Code:
   VCR Code:
7. Press set to save and exit.

Searching for your Code

If your device does not respond to the remote after trying all codes listed for your brand, or if your brand is not listed, try searching for your code:

1. Press a device key once.
2. Press and hold **SET UP** until the red LED blinks twice; then release.
3. Enter **9-9-1**, then the device group number (0= Cable, 1= TV, 2= VCR, 3= Audio). The LED blinks twice.
4. Aim the remote at the device and press ⏻ . The remote sends IR codes from its library to the selected device, starting with the most popular code first. If the device responds, go to step 7.
5. If the device does not respond, press CH▲. The remote will try the next code. Continue until the device responds. Press **CH▼** to try the previous code.
6. To search for other device codes, repeat steps 1 to 5.
7. Press **SET UP** to save and exit.

Checking the Codes

If you have set up the remote using the procedure in “Searching for Your Code”, you may need to find out which four-digit code is operating your equipment.

For example, to fi nd out which code is assigned to your TV:

1. Press **TV** once.
2. Press and hold **SET UP** until the red LED blinks twice; then release.
3. Enter **9-9-0**. The LED blinks twice.
4. To view the code for the first digit, press 1. Count the LED blinks (for example, three blinks = 3), and write down the number in the appropriate code listing in step 8 under “Programming a Device”.

   If a code digit is 0, the LED does not blink.
5. Repeat step 4 for the four remaining digits, using 2 for the second digit, 3 for the third digit, and 4 for the fourth digit.

Changing Volume Lock

The remote comes preset to allow independent volume control of each selected device (Global Volume Unlock). However, you may change the Volume Lock setting to Global Volume Lock so that one device’s volume will control volume in all other modes. After that, you can perform Individual Volume Unlock on a selected device to set its volume control for independent operation or Global Volume Unlock to remove all volume locking.

Changing Volume Lock

The remote comes preset to allow independent volume control of each selected device (Global Volume Unlock). However, you may change the Volume Lock setting to Global Volume Lock so that one device's volume will control volume in all other modes. After that, you can perform Individual Volume Unlock on a selected device to set its volume control for independent operation or Global Volume Unlock to remove all volume locking.

Locking Volume Control to One Mode (Global Volume Lock)

1. Press and hold **SET UP** until the red LED blinks twice; then release.
2. Enter **9-9-3** and then press the mode key for the device you want to control volume (for example,TV). The LED blinks twice. Now when you press VOL+, VOL-, or Mute, the selected device (for example, TV) will control the volume regardless of the current mode.

Unlocking All Volume Control (Restoring Global Unlock)

1. Press and hold **SET UP** until the red LED blinks twice; then release.
2. Enter **9-9-3** and then press VOL+. The LED blinks four times.
   Volume is now independently controlled for all programmed devices.

Unlocking a Single Device's Volume Control

1. Press a device key (TV, VCR/DVD, CBL/ SAT, or AUX).
2. Press and hold **SET UP** until the red LED blinks twice; then release.
3. Enter 9-9-3 and then press VOL-. The LED blinks four times. Volume is now independently controlled for the selected devices.

Troubleshooting

PROBLEM	SOLUTION
LED does not blink when you press a key.	▪ Replace battery with new AAA size battery.
LED blinks when you press a key, but device does not respond.	▪ Make sure the remote is aimed at your device and is not more than 15 feet away
LED blinks one long blink.	▪ An entry error has occurred (for example, wrong key). Try entry sequence again.
Remote does not control devices or commands are not working properly.	▪ Try all listed codes for the device. Make sure the device operates with an infrared remote control.
CH▲, CH▼, and LAST do not work for your RCA TV.	▪ Due to RCA design from 1983 to 1987, only the original remote control will operate these functions.
No volume on a device.	▪ See "**Changing Volume Lock**".
Channels do not change properly.	▪ If the original remote control required you to press **Enter** to change channels, press **Enter** on this remote after entering the channel number.

ENGLISH

Manufacturer's setup codessetup codes

Audio Amplifiers

Manufacturer	Code
Adcom	0577, 1100
Aiwa	0406
Arcam	0269
Bose	0674
Carver	0892, 0269
Cinema Sound	0160
Curtis Mathes	0300
Denon	0160
Durabrand	1561
Elan	0647
GE	0078
Grundig	0269
Harman/Kardon	0892
JVC	331
Left Coast	0892
Lenoxx	1561
Linn	0269
Luxman	0165
Magnavox	0269
Marantz	0892, 0269, 0321
McIntosh	0251
Micromega	0269
Modulaire	0395
NEC	0264
Naim	0269
Nakamichi	0321
Optimus	0013, 0300, 0823, 0395
Panasonic	0308, 0521
Pass Labs	0269
Philips	0892, 0269
Pionee	0013, 0300, 0823
Polk Audio	0892, 0269
RCA	0013, 0300, 0823
RadioShack	0395
Realistic	0013, 0395, 0220
Revox	0269
Sansui	0321
Shure	0264
Sony	0815, 0220, 0689
Soundesign	0078
Technics	0308, 0521
Victor	0331
Wards	0013, 0078
Yamaha	0354, 0133

Cable Converters

Manufacturer	Code
A-Mark	0008, 0144
ABC	0237, 0003, 0008
Accuphase	0003
Acorn	0237
Action	0237
Active	0237
Americast	0899
Archer	0237
BCC	0276
Bell South	0899
British Telecom	0003
Century	0008
Digeo	1187
Director	0476
Fosgate	0276
GE	0144
General Instrument	0476, 0810, 0276, 0003
Gibraltar	0003
GoldStar	0144
Hamlin	0009
Hitachi	0003, 0008, 0009
Insight	0476, 0810
Jerrold	0476, 0810, 0276, 0003
Memorex	0000
Mitsubishi	0003
Motorola	0476, 1376, 0810, 0276, 1187
Nova Vision	0008
Novaplex	0008
Pace	0877, 1877, 0237, 0008
Panasonic	0000, 0008, 0144, 0107
Paragon	0000, 0008, 0525
Penneys	0000
Philips	1305, 0317
Pioneer	0877, 1877, 0144, 0533
Pulsar	0000
Quasar	0000
Regal	0276, 0279
Runco	0000
Samsung	0003, 0144
Scientifi c Atlanta	0877, 1877,0477, 0237, 0003, 0000, 0008
Son	1006
Sprucer	0144
Starcom	0003
Supercable	0276
Time Warner cable	1877
Torx	0003
Toshiba	0000
US Electronics	0276, 0003, 0008
United Cable	0276, 0003
Videoway	0000
Zenith	0000, 0008, 0525, 0899

Audio Amp/Tuners

Manufacturer	Code
ADC	0531
AMC	1077
AMW	1563, 1615
Aiwa	1243, 1405,1388, 1641, 0189, 0121, 0405, 0158
Akai	1255, 1512, 0244, 0346
Alco	1390
Amphion Media Works	1563, 1615
Anam	1609, 1074
Apex	1257
Apex Digital	1774, 1257, 1430
Arcam	1189, 1120
Audiotronic	1189
Audiovox	1390, 1627
B & K	0820, 0840, 0701, 0702
BK	0702
Bose	1229, 0639, 1253
Brix	1602
Cairn	0189
Cambridge Soundworks	1370
Capetronic	0531, 0195
Carver	1189, 0189, 0121, 1289, 0042, 0360, 0008
Casio	0195
Clarinette	0195
Classic	1352
Coby	1389
Compaq	1136
Criterion	1420
Curtis Mathes	0014, 0080, 0039
Daewoo	1250
Dell	1383
Delphi	1414
Denon	1142, 1360, 1306, 0121, 0004
Emerson	0531, 0195, 0424
Fisher	1801, 0801, 0042, 0360, 0219, 0008
Garrard	0463, 0424
Gateway	1517, 1567
Go Video	1352, 1532
Grundig	0189
Harman/Kardon	0110, 1304, 1306, 0891, 0189, 1289
Hewlett Packard	1181
Hitachi	1273, 1801
Initial	1426
Inkel	0491
Integra	0842, 0135, 1320, 1298
JBL	0110, 1306
JVC	1058, 1374, 1495, 1811, 0074
KLH	1428, 1390, 1412
Kawasaki	1390
Kenwood	1313, 1570,1569, 0186, 0042, 0239, 0027, 0077
Koss	1497, 1366, 0424
LG	1293
LXI	0181
Lasonic	1798
Lenoxx	1437
Lexicon	1076
Linn	0189
Liquid Video	1497
Lloyd's	0195
Lloyds	0195
MCS	0039, 0346
Magnavox	1189, 1269, 0531,1266, 0189, 1514, 0195, 0391,1120
Marantz	1189, 1269, 0891, 0189, 1289, 1120, 0039
McIntosh	289
Micromega	1189, 0189
Mitsubishi	1393
Modulaire	0195
Myryad	1189
NAD	0320
Nakamichi	1313, 0097, 1555, 0347
New Castle	0502
Nikko	0322
Nikkodo	0322
Norcent	1389
Nova	1389
Onkyo	0842, 0135, 1320, 1298, 1531
Optimus	1023, 0531, 0014,1074, 0670, 0121, 0186, 0080, 0195, 0738, 0801, 0042, 0181, 0502, 0219, 0158, 0074, 0163, 0177
Oritron	1497, 1366
Outlaw Audio	0391
Panasonic	1308, 1518, 1548,1288, 1316, 1763, 1764, 1633, 0309, 0367, 0039
Penney	0195
Penneys	0195, 0039
Philips	1189, 1269, 0891,1266, 0189, 0391, 1120
Pioneer	1023, 1384, 0531, 0014, 0150, 0630, 0080, 0801, 0244, 0346
Polaroid	1508
Polk Audio	0189, 1289, 1414
Proscan	1254, 0054
Quasar	0039
RCA	1023, 1609, 1254, 0531, 1511, 1390, 1074, 0080,

Audio Amp/Tuners

Manufacturer	Code
RadioShack	1609, 0181
Realistic	1609, 0121, 0186, 0195, 0042, 0181, 0158, 0163, 0177
Regent	1437
Revox	0189
Rio	1869, 1383
Rio Audio	1383
Saba	1519
Samsung	1295, 1500
Sansui	1189, 0189, 0346
Sanyo	1801, 1469, 1251, 0801, 0360, 0219
Scott	0322, 0163
Sears	0195, 0424
Sharp	0186, 1286
Sharper Image	1556
Sherwood	1077, 1653, 0491, 0502, 1423
Shinsonic	1426
Siemens	0424
Sirius	1811, 1602, 1627
Sonic Blue	1869, 1532, 1383
Sony	1058, 1441, 1258, 1759, 1758, 1622, 1858, 1658, 1558, 1406, 0405, 0474, 1349, 1442, 0158
Soundesign	0670
Stereophonics	1023
Sunfire	1313
Teac	1267, 1390,1074, 1528, 0463, 0163
Technics	1308, 1518,1633, 0309, 0039
Thorens	1189
Toshiba	0842, 0135, 0080
Venturer	1390
Victor	0074
Waitec	1352
Wards	0014, 0189,0080, 0042, 0054, 0158
XM	1406, 1414
Yamaha	1023, 0176,1176, 1375, 1331, 1276, 0186
Yorx	0195
Zenith	1293, 0857, 0346

Miscellaneous Audio

Manufacturer	Code
Altec Lansing	1485
Cambridge Soundworks	1530
Creative	0872
D-Link	1522
Imerge	1491
Integra	1789
Jerrold	0520
Marantz	1491
Motorola	1464
Netgear	1785
Omnifi	1605
Onkyo	1789
SSI	1522
Yamaha	1809, 1810

Satellite Receivers

Manufacturer	Code
AlphaStar	0772
Bell ExpressVu	0775
Chaparral	0216
DirecTV	0566, 0639, 1639, 1640, 0247, 0749, 1749, 1142, 1442, 0724, 0819, 1856, 1108,1609, 0392, 1392, 1076, 0099
Dish Network	0775
Dish Network System	0775, 1775, 1005, 1505
Dishpro	0775, 1775, 1005, 1505
Echostar	0775, 1775, 1005, 1505
Expressvu	0775, 1775
GE	0566, 0392
GOI	0775, 1775
General Instrument	0869
Goodmans	1246
HTS	0775, 1775
Hitachi	1250, 0749, 0819
Houston tracker	0775
Hughes	0749, 1749, 1142, 1442
Hughes Network Systems	0749,1749, 1142, 1442
Innova	0099
JVC	0775, 1775
Jerrold	0869
LG	1226

Manufacturer	Code
Magnavox	0724, 0722
McIntosh	0869
Memorex	0724
Mitsubishi	0749
Motorola	0869, 0856
NEC	1270
Netsat	0099
Next Level	0869
Optimus	0724
Panasonic	0701, 0247
Paysat	0724
Philips	0749, 1749, 1142, 1442, 0775, 0724, 0722, 0819, 1076, 0099
Pioneer	1142, 1442
Primestar	0869
Proscan	0566, 0392
RCA	0566, 1142, 1442, 0775, 0143, 0855, 0392, 1392
RadioShack	0566, 0775, 0869
SKY	0856, 0099
Samsung	1142, 1442, 1276, 1108, 1609
Sanyo	1219
Sony	0639, 1639, 1640
Star Choice	0869
Star Trak	0772, 0869
Thomson	0566, 0392
Tivo	1142, 1442
Toshiba	0749, 1749, 0790, 1285, 0819
UltimateTV	1640, 1392
Uniden	0724, 0722
Voom	0869
Zenith	0856, 1856

TVs

Manufacturer	Code
A-Mark	0047, 0054
AOC	0180, 0030
Accuscan	0047
Action	0030
Admiral	0463, 0180, 0047,0054, 0017, 0051, 0093
Advent	0761, 0783, 0815,0817, 0842
Adventuri	0000
Agna	0150
Aiko	0092
Akai	0060, 0702,0672, 0030, 0145, 0812
Albatron	0700, 0843
Alfi de	0672
Alleron	0030
Ambassador	0150
America Action	0180
American High	0000, 0060
Amstrad	0171
Amtron	0000, 0180
Anam	0180
Apex	0156, 0748, 0765
Apex Digital	0156, 0748, 0765,0879, 0767
Audinac	0180
Audiovox	0451, 0180, 0092, 0623
Aumark	0060
Aventura	0171
Baysonic	0180
Beaumark	0017, 0030, 0178
Belcor	0030
Bell & Howell	0054, 0154, 0093
Bell and Howell	0054, 0154, 0093
BenQ	1756, 1032
Bradford	0180
Brockwood	0030, 0178
Broksonic	0236, 0463, 0180
CXC	0180
Candle	0030
Capehart	0017, 0030, 0178, 0092
Capetronic	0030
Carnivale	0030
Carver	0054
Celebrity	0000
Celera	0765
Changhong	0156,0765, 0783, 0767
Cineral	0451, 0092
Citek	0047
Citizen	0054, 0000, 0451, 0463, 0180,0060, 0030, 0092, 0171
Clarion	0180
Classic	0030, 0092
Colortyme	0047, 0054, 0017, 0060, 0030, 0178
Commercial Solutions	0047, 1447
Conic	0178
Contec	0180
Craig	0180, 0171
Crosley	0054, 0000, 0180, 0030, 0171
Crown	0093, 0180, 0672
Crown Mustang	0672

ENGLISH

Manufacturer	Code
Curtis Mathes	0047, 0054, 0154, 0000, 0051, 0451, 0093, 0180, 0060, 0702, 0030, 0178, 0145, 0166, 1147, 1347
Daewoo	0451, 1661, 0672, 0178, 0092, 0623, 1755,1756, 0661
Dayton	0092
Daytron	0030, 0178, 0092
Dell	1454
Denon	0511, 0145
Dumont	0017, 0180, 0178
Durabrand	0463, 0180, 0178, 0171, 1034, 1463
Dwin	0093
ESA	0171, 0812
Eaton	0060
Electroband	0000
Electrograph	1755
Electrohome	0154, 0000, 0150,0030, 0178
Emerald	0178
Emerson	0047, 0154, 0451, 0236, 0463, 0180, 0150, 0178, 0171, 0623
Envision	0030
Fisher	0054, 0154, 0000
Fortress	0093
Funai	0000, 0180, 0171
Futuretech	0180
GE	0047, 0000, 0051,0451, 0060, 0030, 0178, 1147, 1347, 1447
Gateway	1755, 1756
Gemini	0047
Gibraltar	0017, 0000, 0030
Gibralter	0017, 0030Go
A-Mark	0047, 0054
AOC	0180, 0030
Accuscan	0047
Action	0030
Admiral	0463, 0180, 0047, 0054, 0017, 0051, 0093
Advent	0761, 0783, 0815, 0817, 0842
Adventuri	0000
Agna	0150
Aiko	0092
Akai	0060, 0702, 0672, 0030, 0145, 0812
Albatron	0700, 0843
Alfi de	0672
Alleron	0030
Ambassador	0150
America Action	0180

Manufacturer	Code
American High	0000, 0060
Amstrad	0171
Amtron	0000, 0180
Anam	0180
Apex	0156, 0748, 0765
Apex Digital	0156, 0748, 0765, 0879, 0767
Audinac	0180
Audiovox	0451, 0180, 0092, 0623
Aumark	0060
Aventura	0171
Baysonic	0180
Beaumark	0017, 0030, 0178
Belcor	0030
Bell & Howell	0054, 0154, 0093
Bell and Howell	0054, 0154, 0093
BenQ	1756, 1032
Bradford	0180
Brockwood	0030, 0178
Broksonic	0236, 0463, 0180
CXC	0180
Candle	0030
Capehart	0017, 0030, 0178, 0092
Capetronic	0030
Carnivale	0030
Carver	0054
Celebrity	0000
Celera	0765
Changhong	0156, 0765, 0783, 0767
Cineral	0451, 0092
Citek	0047
Citizen	0054, 0000, 0451, 0463, 0180,0060, 0030, 0092, 0171
Clarion	0180
Classic	0030, 0092
Colortyme	0047, 0054, 0017, 0060, 0030, 0178
Commercial Solutions	0047, 1447
Conic	0178
Contec	0180
Craig	0180, 0171
Crosley	0054, 0000, 0180, 0030, 0171
Crown	0093, 0180, 0672
Crown Mustang	0672
Curtis Mathes	0047, 0054, 0154, 0000, 0051, 0451, 0093, 0180, 0060,0702, 0030, 0178, 0145, 0166, 1147, 1347
Daewoo	0451, 1661, 0672, 0178, 0092, 0623, 1755, 1756, 0661
Dayton	0092
Daytron	0030, 0178, 0092

Manufacturer	Code
Dell	1454
Denon	0511, 0145
Dumont	0017, 0180, 0178
Durabrand	0463, 0180, 0178, 0171, 1034, 1463
Dwin	0093
ESA	0171, 0812
Eaton	0060
Electroband	0000
Electrograph	1755
Electrohome	0154, 0000, 0150, 0030, 0178
Emerald	0178
Emerson	0047, 0154, 0451,0236, 0463, 0180, 0150, 0178, 0171, 0623
Envision	0030
Fisher	0054, 0154, 0000
Fortress	0093
Funai	0000, 0180, 0171
Futuretech	0180
GE	0047, 0000, 0051, 0451, 0060, 0030, 0178, 1147,1347, 1447
Gateway	1755, 1756
Gemini	0047
Gibraltar	0017, 0000, 0030
Gibralter	0017, 0030Go
Video	0060
GoldStar	0047, 0054, 0030, 0178
Goodmans	0360
Gradiente	0053
Logik	0236, 0180
MGA	0150, 0030, 0178
MGN Technology	0178
MTC	0180, 0060, 0030, 0092
Magnasonic	0054,0000, 0156, 0093, 0030, 0092
Magnavox	0047, 1454, 0054,0154, 0000, 0051, 0250, 0180, 0060, 0030, 0092, 0171, 0706, 1254, 1755
Majestic	0017
Marantz	1454, 0054, 0030
Matsushita	0051, 0250, 0650
Maxcent	1755, 1756
Maxent	1755
Megapower	0700
Megatron	0047, 0178, 0145
Memorex	0154, 0463,0180, 0150, 0060, 0030, 0178
Micro Genius	0150
Midland	0047, 0017, 0051
Mitsubishi	0154, 0093, 0150, 1250, 0030, 0178, 0836

Manufacturer	Code
Monivision	0700, 0843
Motorola	0054, 0051, 0093, 0150
Multitech	0180
NAD	0156, 0178, 0166, 1156, 0866
NEC	0047, 0030, 0178, 1704
NTC	0092
NetTV	1755
Nikko	0047, 0017, 0154, 0156, 0030, 0178, 0092, 1347
Nikkodo	0030, 0178, 0092
Nishi	0030
Norcent	0748
Nyon	0000
Onwa	0180
Optimus	0154, 0250, 0093,0180, 0150, 0030, 0178, 0166, 0650, 0679
Optonica	0093
Orion	0017, 0236, 0463, 0180, 0178, 1463
PCE	0156, 0060
Pace	0092
Panasonic	0047, 0054, 0154, 0000, 0156, 0051, 0250, 0093, 0236, 0150, 0060, 0053, 0030, 0178, 0145,1347, 0650
Panda	0706
Paxonic	0060, 0030
Penney	0047, 0156, 0051, 0060, 0030, 0178, 1347
Penneys	0047, 0000, 0156, 0051, 0250, 0060, 0030, 0178
Petters	1523
Philco	0054, 0463, 0030, 0145
Philips	1454, 0054, 0017, 0000, 0030, 0171, 1254, 0690
Pilot	0051, 0060, 0030, 0178
Pioneer	0166, 0866, 0679
Polaroid	0765, 0865, 1523
Portland	0451, 0092
Precision	0236, 0180
Prima	0761, 0783, 0815, 0817
Princeton	0700
Prism	0051, 0250
Proscan	0047, 0030, 1347, 1447
Proton	0178
Pulsar	0017, 0092
Pulser	0178, 0092
Quartz	0150, 0178
Quasar	0051, 0250, 0650

Manufacturer	Code
RCA	0090, 1547, 0047, 0054, 0000, 0051, 0093, 0178, 1047, 1147, 1247, 1347, 1447, 0679
Rabbit	0047
RadioShack	0047, 0154, 0180, 0150, 0030, 0178
Realistic	0047, 0154, 0180, 0150, 0030, 0178
Runco	0017, 0060, 0030
SR2000	0154, 0171
SSS	0180
SV2000	0054
SVA	0748, 0865
Sampo	0047, 0030, 1755, 1756
Samsung	0047, 0054, 0017, 0154, 0060, 0702, 0030, 0178, 1060, 0812
Sanky	0060, 0030
Sansui	0463, 0060, 0030
Sanyo	0088, 0047, 0054, 0154, 0000, 0463, 0171, 1755
Saville	0060
Scotch	0178
Scott	0236, 0180, 0030, 0178
Sears	0047, 0054, 0017, 0154, 0000, 0156, 0051, 0093, 0060, 0053, 0030, 0178, 0171, 0166
Sharp	0054, 0093, 0180
Sheng Chia	0093
Shivaki	0178
Siemens	0145
Signature	0054
Signature 2000	0047,0093,0030
Simpson	0030, 0178
Singer	0060, 0092
Solar Drape	0000
Sony	1100, 0017, 0154, 0000, 0150, 0053
Soundesign	0180, 178
Spectravision	0156, 0178
Squareview	0171
Starlite	0236, 0180
Studio Experience	0843
Supreme	0000
Sylvania	0047, 0054, 0154,0000, 0051, 0030, 0178, 0092, 0171
Symphonic	0000, 0180, 0178, 0171
TMK	0236, 0180, 0178
TNCi	0017
TVS	0463
Tandy	0093
Tatung	0000, 0051, 1756
Teac	0154, 0706
Technics	0047, 0054, 0017, 0051, 0250,1347, 0650
Technovox	0030
Techwood	0051, 0250, 0060
Teknika	0054, 0463, 0180, 0150, 0060, 0178, 0092
Telecolor	0017
Telefunken	0702
Thomas	0047, 0178
Thomson	0047, 1447
Tocom	0156
Toshiba	0154, 0156, 0150,1265, 0060, 0145, 0166, 1145, 1156, 1256, 1356, 1656, 1704, 0650
Totevision	0051
Toyomenka	0178
Truetone	0051, 0250
Ultra	0092
Universal	0047
V	1755, 1756
Vector Research	0030
Victor	1100, 0053
Vidikron	0054
Vidtech	0178
Viewsonic	1755
Viking	0060
Visio	1755, 1756
Vizio	1756
Wards	0047,0054,0017, 0154, 0000, 0156, 0051, 0093, 0236,0180, 0060, 0030, 0178, 0166, 1147, 1347, 1156, 0866
Waycon	0156
Welton	0178
Westinghouse	0451
White Westinghouse	0451, 0236, 0463, 0623
World	0451, 0236, 0463, 0180
XR1000	0154, 0180, 0171
Yamaha	0030
Yorx	0030
Zenith	0047, 0017, 0000, 0093, 0463, 0030, 0178, 0145, 0092, 0171, 1145, 0812

VCRs

Manufacturer	Code
A-Mark	0000, 0037, 0240
ABS	1972
Admiral	0209, 0060, 0048, 0039, 0047, 0104
Adventura	0000, 0037, 0240
Adyson	0072
Aiwa	0124, 0000, 0037
Akai	0175, 0041
Alba	0209, 0072
Alienware	1972
Allegro	0039
American High	0035, 0081
Amstrad	0000
Asha	0240
Astra	0035, 0240
Audiovox	0037
Avis	0000, 0072
Beaumark	0240
Bell & Howell	0000, 0035, 0048, 0039, 0104
Bell and Howell	0000, 0035, 0048, 0039, 0104
Broksonic	1479, 0184, 0121, 0209
CCE	0072
Calix	0037
Candle	0037
Canon	0035
Carrera	0240
Carver	0035, 0081
Citizen	1278, 0000, 0035, 0037, 0240, 0209
Classic	0037
Colortyme	0035, 0060, 0045
Colt	0000, 0072
Craig	0037, 0047, 0240, 0072
Criterion	0000, 0072
Crosley	0000, 0035, 0081
Crown	0072
Curtis Mathes	1035, 0000, 0035, 0060, 0162, 0240, 0041
CyberPower	1972
Cybernex	0240
Daewoo	1278, 0037, 0045
Daytron	0037
Dell	1972
Denon	0081, 0042
Derwant	0041
DirecTV	0739
Dual	003, 0000
Dynatech	0000, 0240
Electrohome	0000, 0060, 0037, 0240, 0043, 0209
Electrophonic	0037
Emerald	0184, 0121
Emerex	0032
Emerson	1479, 1278, 0000, 0037, 0184, 0240, 0121, 0043, 0209
Fisher	0000, 0039, 0047, 0104
Fuji	0035, 0033
Fujitsu	0000
Funai	0000, 0037, 0072
GE	1035, 1060, 0807, 0000, 0035, 0060, 0048, 0240
Garrard	0000
Gateway	1972
Gemini	0060
Genexxa	0000, 0037
Go Video	0614, 0240
GoldStar	1237, 0000, 0035, 0037, 0039
Granada	0081, 0042
Grundig	0081
HI-Q	0000, 0035, 0047
HP	1972
Harley Davidson	0000
Harman/Kardon	0081
Harvard	0072
Harwood	0072
Hewlett Packard	1972
Hitachi	0089, 0000, 0035, 0037, 0045, 0042, 0041
Howard Computers	1972
Hughes Network Systems	0739, 0042
Humax	0739
Hush	1972
Hytek	0000, 0047, 0072I
TT Nokia	0240, 0041
JVC	0067, 0041
Janeil	0240
Jensen	0067, 0041
KEC	0037
KLH	0072
KTV	0000
Kenwood	0067, 0041
Kodak	0035, 0037
LG	0037, 0240
LXI	0000, 0037, 0042, 0067
Linksys	1972
Lloyd's	0000
Lloyds	0000, 0240, 0072
Loewe	0081
Logik	0000, 0240, 0072
M Electronic	0240
MEI	0035
MGA	0060, 0240, 0043

ENGLISH

Manufacturer	Code
MGN Technology	0240
MTC	0000, 0240, 0072
MTC	0000, 0240, 0072
MTX	0000
Magnasonic	1278, 0000, 0037, 0240, 0072
Granada	0081, 0042
Grundig	0081
HI-Q	0000, 0035, 0047
HP	1972
Harley Davidson	0000
Harman/Kardon	0081
Harvard	0072
Harwood	0072
Hewlett Packard	1972
Hitachi	0089, 0000, 0035, 0037, 0045, 0042, 0041
Howard Computers	1972
Hughes Network Systems	0739, 0042
Humax	0739
Hush	1972
Hytek	0000, 0047, 0072
IKEC	0037
KLH	0072
KTV	0000
Kenwood	0067, 0041
Kodak	0035, 0037
LG	0037, 0240
LXI	0000, 0037, 0042, 0067
Linksys	1972
Lloyd's	0000
Lloyds	0000, 0240, 0072
Loewe	0081
Logik	0000, 0240, 0072
M Electronic	0240
MEI	0035
MGA	0060, 0240, 0043
MGN Technology	0240
MTC	0000, 0240, 0072
MTC	0000, 0240, 0072
MTX	0000
Magnasonic	1278, 0000, 0037, 0240, 0072
Magnavox	1781, 0000, 0618, 0035, 0037, 0048, 0039, 081, 0240
Magnin	0035, 008,0240
Marant1 Marta	0037
Matsui	0037, 0209
Matsushita	0035, 0081, 0162
Media Center PC	1972
Memorex	1237, 0000, 0035, 0037, 0048, 0039, 0047, 0162, 0240, 0104, 0209, 0072

Manufacturer	Code
Metz	0037
Microsoft	1972
Midland	0240
Mind	1972
Minolta	0042
Mitsubishi	0807, 0000, 0060, 0048, 0047, 0042, 0067, 0043, 0041
Motorola	0035, 0048
Movie Walker	0072
Multitech	0000, 0039, 0072
NAD	0240, 0104
NAP	0035, 0037, 0039, 0033, 0042
NEC	0067, 0104, 0041
Newtech	0072
Nikko	0037
Nikkodo	0037
Nishi	0240
Niveus Media	1972
Noblex	0240
Northgate	1972
Olympus	0035, 0162, 0104
Onkyo	0222
Optimus	0000, 0035, 0037,1062, 0048, 0047, 0162, 0240,
Orion	1479, 0000, 0184, 0240, 0104, 0121, 0209
Panama	0035
Panasonic	0225, 1035, 0000, 0614, 0616, 0035, 1062, 0162
Penney	1237, 1035, 0035, 0037, 0042, 0240
Penneys	0000, 0035, 0037, 0047, 0081, 0162, 0042, 0067, 0240
Pentax	0042
Philco	0000, 0035, 0081, 0209
Philips	0000, 0616, 0618, 0739, 0035, 0048, 0081, 0162, 0045, 0209
Pilot	0037
Pioneer	0081, 0162, 0042, 0067
Polk Audio	0081
Profi tronic	0240
Proscan	1060, 0060
Protec	0000, 0072
Protech	0072
Pulsar	0039, 0240
Pulser	0240
Quartz	0035, 0047
Quasar	1035, 0035, 0162
RCA	1035, 1060, 0807, 0000, 0880, 0035, 0060, 0048, 0045, 0042, 0240

Manufacturer	Code
RadioShack	0000, 0035, 0037, 0048, 0047, 0162, 0240, 0104
Radix	0037
Randex	0037
Realistic	0000, 0035, 0037, 0048, 0047, 0162, 0240, 0104, 0121
ReplayTV	0614, 0616
Ricavision	1972
Runco	0039
STS	0042
SV2000	0000, 0072
SVA	0000
TT Nokia	0240, 0041
JVC	0067, 0041
Janeil	0240
Jensen	0067, 0041
Samsung	0000,1014, 0739, 0060, 0045, 0240
Samtron	0240
Sanky	0048, 0039
Sansui	1479, 0000,0067, 0240, 0209, 0041, 0072
Sanyo	0159, 0000, 0047, 0240, 0104
Scott	0184, 0045, 0121, 0043
Sears	1237, 0000, 0035, 0060, 0037, 0048, 0039, 0047, 0033, 0162, 0045, 0042, 0067, 0104, 0043, 0209, 0041, 0072
Sharp	0807, 0000,0048, 0047, 0032
Shintom	0000,0039, 0240, 0072
Shogun	0240
Siemens	0037, 0104
Signature	0035
Signature 2000	0000, 0035, 0060, 0037, 0048
Singer	0037, 0240, 0072
Sonic Blue	0614, 0616
Sony	1232, 0000, 0636,1972, 0035, 0047, 0032, 0033, 0067
Soundmaster	0000
Stack 9	1972
Sylvania	1781, 0000, 0035, 0081, 0043
Symphonic	0000, 0240
Systemax	1972
TMK	0000, 0240
TNIX	0037
Tagar Systems	1972
Tandy	0000, 0104
Tatung	0000, 0048, 0081, 0067, 0041
Teac	0000, 0067, 0041
Technics	0000, 0035, 0060, 0037, 0039, 0162
Teknika	0000, 0035, 0037
Telecorder	0240
Telefunken	0041
Thomas	0000
Thomson	0060, 0041
Tivo	0618, 0636, 0739, 1503
Tocom	0240
Toshiba	0845, 1145, 0000,1503, 1008, 1972, 0045, 0240, 0043, 0209, 0041
Totevision	0037, 0240
Touch	1972
Trix	0037
Ultra	0045
Unitech	0240
Vector	0045
Vector Research	0184
Vextra	0072
Victor	0067, 0041
Video Concepts	0045
Videomagic	0037
Videosonic	0000, 0240, 0072
Viewsonic	1972
Villain	0000
Voodoo	1972
Wards	0000, 0035, 0060, 0037, 0048, 0039, 0047, 0081, 0033, 0045, 0042, 0240, 0043, 0041, 0072
White Westinghouse	000, 0209, 0072
World	0209
XR-1000	0000, 0035, 0072
XR1000	0000, 0035, 0240, 0072
Yamaha	0041
ZT Group	1972
Zenith	1479, 0000, 0037, 0039, 0033, 0209, 0041

DVD Players

Manufacturer	Code
3D LAB	0503, 0539
Advent	1016
Aiwa	0641
Akai	0899, 0770, 0705
Alba	0672, 0717
Alco	0790
Allegro	0869
Apex	0533, 0672, 1056,1061, 0830, 0794, 0796,0797, 1100, 1020, 0717, 0755
Apex Digital	0672, 1056, 1061, 0830, 0794, 0796, 0797, 1100, 1004, 1020, 0717, 0755
Aspire Digital	1168
Audiovox	0790, 0717, 1071, 1121, 1122
Axion	1071
Blaupunkt	0717
Blue Parade	0571
Blue Sky	0695, 0699
Brandt	0651
Broksonic	0695, 0868
California Audio Labs	0490
Celestial	1020
Centrex	0672, 1004
CineVision	0869, 0876, 0833
Cinea	0831
Citizen	1003, 1277
Clairtone	0571
Coby	0778, 1107
Craig	0831
Creative	0503, 0539
Curtis Mathes	1087
CyberHome	0816, 1023,1117,1024, 1129, 0874
Cytron	0705
DVD2000	0521
Daewoo	0869, 1172,0784,0770, 1169, 0705, 0833
Dansai	0770
Decca	0770
Denon	0490, 0634
Denver	0778
DiViDo	0705
Digitrex	0672
Disney	0675, 1270
Dual	0675
Durabrand	1127
Electrohome	1003
Emerson	0675, 0821, 1268,0591
Enterprise	0591
Entivo	0503, 0539
Enzer	0770

Manufacturer	Code
Firstline	0651
Fisher	0670
Funai	0675, 1268, 1334
GE	0522, 0717, 0815
GPX	0699
Gateway	1158, 1073
General Electric	0717
Go Video	0573,1075, 1044,0744, 0717, 0869, 0741,0783, 1158, 1099, 1304,1730, 0833, 0715
Go Vision	1071
GoldStar	0801, 0869, 0741
Goodmans	0790
Gradiente	0490, 0651
Greenhill	0717
Grundig	0539, 0705
Harman/Kardon	0582, 0702
Hitachi	0573, 0664, 1247
Hiteker	0672
IRT	0783
Initial	0717
Integra	0571, 0627
JBL	0702
JMB	0695
JVC	0623, 1164, 0558, 0867
Jensen	1016
KLH	1020, 0790, 0717, 1149
KLH Digital	0717
Kawasaki	0790
Kenwood	0490, 0534
Kloss	0533
Koss	1061, 0651
LG	0801, 0591, 0869, 0741
Lasonic	0798, 0627
Lecson	1533
Lenoxx	1127
Lite-On	1058, 1158
LiteOn	1058, 1158, 1416, 1440
Loewe	0511, 0741
Logix	0783
Magnasonic	0675, 0651
Magnavox	0503, 0539,0675, 0646, 0821
Marantz	0503, 0539, 0675
McIntosh	1533
Medion	0651
Memorex	0695, 1270, 0831
Microsoft	0522
Minato	0752
Mintek	0717, 0839
Mitsubishi	0521, 1521
NAD	0591, 0741

Manufacturer	Code
NEC	0785, 0869
Naiko	0770
Nesa	0717
NexxTech	1402
Norcent	1003, 1107
Onkyo	0792, 0503, 0627
Optimus	0571
Orion	0695
Oritron	0651
Palsonic	0672
Panasonic	0503, 0490, 1762,0703, 1362, 1462, 1490, 0571
Philips	0503, 0539, 0675,1267, 0646, 0854, 1354, 1260
Phonotrend	0699
PianoDisc	1024
Pioneer	0571, 0525, 0631
Polaroid	1061, 1020
Polk Audio	0539
Portland	0770
Prima	1016
ProVision	0778
Proceed	0672
Proscan	0522
Prosonic	0699
Qwestar	0651
RCA	0522, 0571,0822, 1132, 1022, 0790, 0717
RadioShack	0571
Radionette	0741
Realistic	0571
Reoc	0752
Revoy	0699
Rio	0869
Rotel	0623
Rowa	1004, 0823
SVA	0717
Saba	0651
Sampo	0752
Samsung	0490, 0573,0820, 1075, 0899, 1044, 0744

Manufacturer	Code
Sansui	0695
Sanyo	0695, 0675, 0670, 1334, 0873
Schneider	0783
Schwaiger	0752
Sensory Science	1158
Sharp	0675, 1256, 0752, 0630
Sharper Image	1117
Sherwood	0770, 1043
Shinsonic	0533, 0839
Slim Art	0784
Sonic Blue	0573, 0869 ,0783, 1099, 0715
Sony	0533, 1033, 1431, 0864, 1533
Sova	1122
Superscan	0821
Sylvania	0675, 0821, 1268, 0630
Symphonic	0675, 0821, 1268, 1334
Tatung	0770
Teac	0809, 0571, 0790, 0717
Technics	0490, 0703
Technika	0770
Tevion	0651
Theta Digital	0571
Thomson	0511, 0522
Toshiba	0503, 0695, 1045, 1154, 0573, 0539
US Logic	0839
USLogic	0839
Unimax	0770
Universum	0591
Urban Concepts	0503, 0539
Venturer	0790
Wesder	0699
Xbox	0522
Yamaha	0490, 0539, 0545
Zenith	0503, 0591, 0869, 0741
Zeus	0784
iLo	1348

CARE

- Keep the remote dry. If it gets wet, wipe it dry immediately.
- Use and store the unit only in normal temperature environments.
- Handle the remote gently and carefully. Don’t drop it.
- Wipe the remote with a damp cloth to keep it looking like new.

Questions? Need some help?

Call our toll-free number found on the insert with this icon:

Or visit www.polaroid.com.

20070710